



**GAS HOB USER'S
MANUAL
60-90 CM**

**BITK290GH6B
BITK260GHB
BITK260GHX
BITK290GH5X
BITK290GH5B**

Please first read this manual!

Dear Customer,

We desire you get the most out of this product which is produced in the modern facilities on basis of high-quality.

For this reason, please read this manual carefully and thoroughly prior to using the product and keep it for future reference. If you assign the product to anybody else, please give it together with the user's manual. When using the product, taken into consideration all information and cautions specified in the manual and comply with the instructions.

Symbols used in the user's manual and their corresponding meanings:

	Important information and useful tips for use
	Warning against life and property risks
	Warnings against electric shocks
	Warning against fire risk
	Warning against hot surfaces

The user's manual helps you use the product quickly and safely.

- Please read the user's manual prior to installation and operation of it.
- Always comply with the safety-related instructions.
- Keep the user's manual at an easily accessible place as you may need it for reference in future.
- Please read the other documents provided with the product as well.

Please remember that this user's manual may also be applicable for other versions. Differences between the versions are clearly indicated in the manual.

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS	3
1.1.	General Safety	3
1.2.	Safety for children.....	5
1.3.	Safety of the electric-related works	5
1.4.	Intended use.....	5
2.	INSTALLATION.....	6
2.1.	Prior to use of the product	6
2.2.	Installation and connections.....	7
2.3.	Wiring.....	9
2.4.	Gas connection	9
2.5.	Sealing inspection	11
2.6.	Final inspection	11
2.7.	Disposal of the product	12
3.	ABOUT PRODUCT:.....	13
3.1.	General view.....	13
3.2.	Consumption values	16
4.	USE OF THE RANGE	17
4.1.	First use	17
4.2.	First cleaning.....	17
4.3.	Description of use of the gas range:.....	17
4.4.	Gas cut-off safety apparatus.....	18
6.	SUGGESTED SOLUTIONS FOR PROBLEMS	19
6.1	Cleaning the range	19

1. IMPORTANT SAFETY INSTRUCTIONS

This section contains safety instructions to help prevention of physical injury or material damage. Failure to comply with these instructions makes any warranty invalid.

1.1. General Safety

- This product is not designed for use by persons (including children) who are lack of knowledge or experience and have deficient physical, sensual or cognitive skills unless they are attended by a person to take care of their safety or give necessary instructions for use of the product. The children should be supervised and never be allowed playing with the product.
- Plug the product to an outlet/mains protected by a fuse of such value as given in the table “Technical specifications”. In case of use with or without transformer, remember to get the earthing installation done by a qualified electrician. If the product is used without proper earthing as per the applicable local regulations, our firm shall not be responsible for any resulting loss.
- If the power cable/plug is damaged, do not operate the product. Contact with the Authorized Service Center.
- If the product is damaged and has a noticeable damage, do not operate the product.
- Do not perform any repair or modification on the product. However, you may remedy some troubles; see suggested solutions for the problems, page 18.
- Never wash the product by spraying or pouring water on it! There is risk of electric shock!
- Fire Hazard: Do not place/store items on cooking surfaces.
- CAUTION: The cooking process must be controlled. A short cooking process must be controlled continuously.
- WARNING: Cooking oil or fat left unattended on the stove can be dangerous and may cause a fire.

- Be careful when using alcohol in the food. The alcohol evaporates at high temperature and when it contacts with hot surfaces, it may inflame and cause fire.
- Do not heat the sealed cans and glass jars. The resulting pressure may cause burst of the jar.
- As the edges of the product will be hot when working, do not put any flammable substances near it.
- Keep open all around the ventilation channels.
- The product may be hot during use. Do not touch the hot parts and heating elements, etc.
- Make sure the product is switched off after each use.
- Product and accessible parts of the product are hot during use of it.
- Do not touch the product in use.
- Do not use sharp and piercing tools when cleaning the glass; such materials may give harm to your product.
- As superheated oil may cause fire, always keep watch when the product is in use.
- In case of possible fire, do not attempt to extinguish the fire with water; disconnect the power connection of the product immediately and cover the fire by help of a wet blanket.
- Do not use steam cleaner.
- If the glass of the product is broken: switch off all burners and any electric heater element immediately and disconnect power supply of the equipment; do not touch the surface of the equipment and do not use the equipment.
- To clean the glass of the range, never you abrasive agents or sharp metal scrapers that may destroy the surface and cause the glass to be broken.
- Do not use the product on the nylon, flammable and heat-sensitive materials.
- Pots placed on the heaters of the range should be in proper sizes.
- Do not scrub the buttons and inox surfaces of the range by means of scrapping objects; do not use Scotch-Brite.
- If the flame of burner is accidentally off, the burner is switch off in controlled manner and it is not fired for minimum 1 minute.
- Do not operate the ignition for more than 15 seconds; if the burner fails to ignite, immediately cease operation and either open the compartment door or observe a one-minute waiting period prior to initiating a subsequent relight attempt.

1.2. Safety for children

The exposed parts of the product will get heated during use and after use until it cools down; keep children away.

- CAUTION: During use of the grill, the accessible parts may be hot. You should keep the children away from the product.
- The children under 8 eight years old should not touch the product when they are unattended by a adult.
- This equipment may be used by children above 8 years old and/or persons who are handicapped physically, sensually or cognitively if they are duly informed about risks and safe use of the product.
- The children should not play with the product. Cleaning and maintenance of the equipment may not be performed by the children unattended.
- Packaging materials may be dangerous for the children. Keep the packaging materials at a place not accessible by the children or thrown in the garbage by sorting out according to the instructions on waste.

1.3. Safety of the electric-related works

- All Works on the electric equipment and systems should be performed by an authorized and qualified person.
- This product is not suitable for you with a remote system.
- In case of any damage, switch off the product or disconnect the power supply. To this end, switch of the fuse of the house.
- Make sure the fuse rated value is same with the current of the product.

1.4. Intended use

This product is for home use only. It is not suitable for, and is not authorized for, commercial or professional use. It should also not be installed in mobile environments such as yachts or caravans.

CAUTION: This product is intended for cooking only. Do not use for other purposes such as heating a room.

The manufacturer assumes no responsibility for damage caused by abuse, damage in transit, or improper use, and such damage is not covered by the warranty (if any). The lifetime of this product is 10 years. This is the period of time during which the manufacturer will have the spare parts necessary to keep the product operating as described.

2. INSTALLATION

2.1. Prior to use of the product



Make sure the power and/or gas installation is suitable. If not, make the necessary arrangements by means of qualified technical and installer.



The customer shall be responsible for preparation of the place where the product shall be placed as well as the power and/or gas installation.



For installation of the product, you should comply with the rules specified in the local standards concerning power and/or gas



Control the product prior to installation to find out whether there is any damage or not. If the product is damaged, do not make the installation. The damaged products may cause risk for your safety.



Any works on the gas equipment and system should be performed by authorized and qualified persons.



The products have no system for discharge of gas that may occur as a result of burning. The product should be installed and connected as per the applicable regulations concerning installation. You should observe the requirements regarding ventilation.



Air necessary for burning is taken from the room air and the emitted gases are directly given to the room.



A good ventilation is required in the room for safe operation of your product. If there is no window or door to be used for ventilation of the room, an additional ventilation system should be installed.






The floor area of the kitchen should be bigger than 8m^2 .
Kitchen volume should be bigger than 20m^3 .



The chimney outlet should be at height of 1.80m from the floor and in diameter of 150mm directly opening to the atmosphere.



Air vent should be near the kitchen floor and minimum 75cm^2 , opening to the outer atmosphere

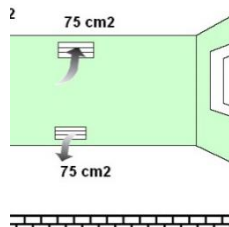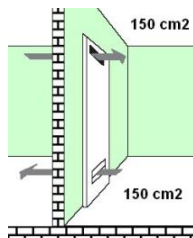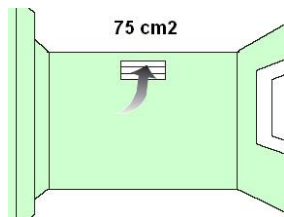

2.2. Installation and connections

2.2.1. Preparation of the built-in range prior to installation

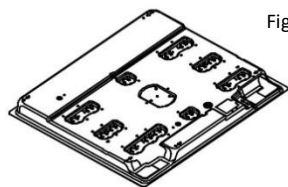


Figure 1

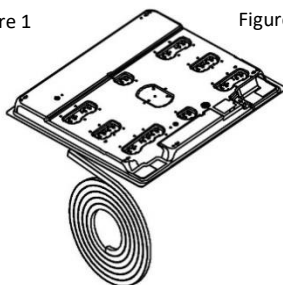


Figure 2

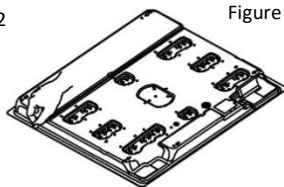


Figure 3

Turn upside down range in the Styrofoam in the package and apply the silicon.

In case of inox products, apply the silicon on inox surface, and in case of glass range products apply to the glass surface.

Apply the silicon supplied in the package around the range as shown in the figure.

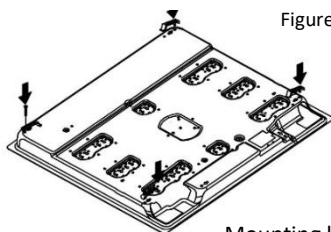


Figure 4

Mounting legs connection holes.


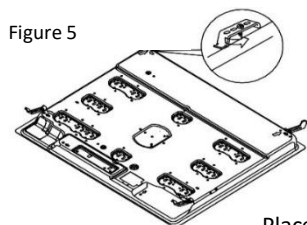



Figure 5

Place the mounting legs as shown in the figure.

Figure 6

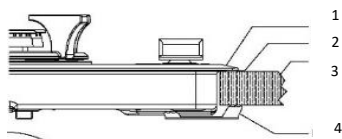

1. Glass
2. Silicon Seal
3. Tray
4. Connection Element

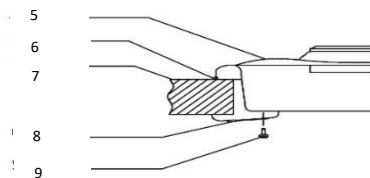

5. Upper Tray
6. Silicon Seal
7. Counter Surface
8. Connection Clips
9. Screw

2.2.2. Installation of the range



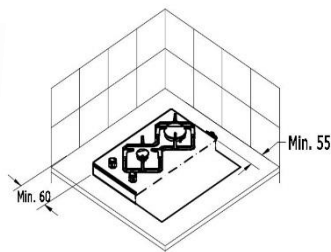



Figure 7

The range is equipped with a seal to prevent the liquids through the cavities into the cabinet. In order to place this seal, adhere the seal as shown in the figures above. Turn the range upside down and remove the protective tape of the rubber seal and adhere it to the range; both ends of the seal should meet each other. Install the mounting sheets as shown in figure 5 by help of screw. And place the range in the opening on the counter.

Figure 7 shows the size to which the counter will be cut for installation of the range. Place the prepared range into the counter cut to these sizes. If you will use the range on the built-in oven, observe the figures 9 and 10 for proper air circulation between the oven and range.

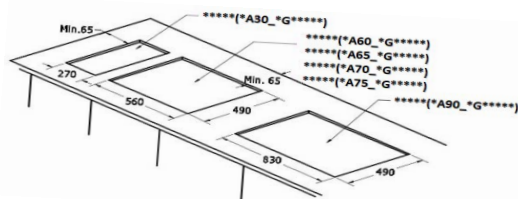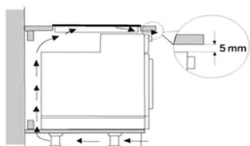

shape 9

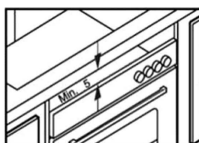

shape 8



Start to use after you remove the protective film on Inox surface.

2.3. Wiring



You must use an earthed line for the product! The manufacturing firm shall not be responsible for any damages that may occur if the product is used without the earth.



Electric shock, short-circuit or fire risk arising from the installation performed by any unprofessional persons! The product should be connected to the mains only by an authorized and qualified person and the warranty of the product starts only after correct installation.




Power shock, short-circuit or fire risk arising from damaged power cable! The power cable should be crushed, crinkled or pinched or should not contact with the hot parts of the product. If the power cable gets damaged, it should be replaced by a qualified electrician.

- The mains supply data should be same on the data indicated on the nameplate of the unit. You may find the nameplate at the back of or under the product.
- The connection cable of the product should comply with the technical specifications and power consumption.



Risk of electric shock! Before performing any work on the electric installation, please disconnect the power supply of the product.

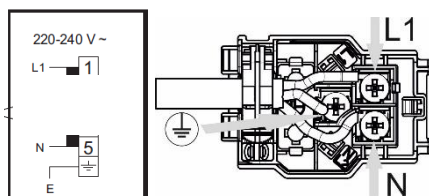

2.4. Gas connection



Any work on the gas equipment and systems should be performed by the qualified and authorized persons.

Prior to installation, make sure the conditions of local distribution (gas type and gas pressure) comply with the settings of the product.

2.4.1. LPG connection


Make sure the gas hose and gas pressure-reducing valve you use on the range are safe. Connect the gas delivery hose with the hose behind the range and tighten it by using a clamp and screwdriver (figure 10). Make sure it is firmly tightened.

Gas delivery hose of the equipment should not be longer than 1500mm. The pressure of the pressure-reducing valve to be used for LPG should be 300mmSS and certificated.



Gas delivery hose should not pass through the hot part behind the equipment. Temperature of the gas hose should not exceed 90°C (degree).

Prior to use, make sure the system does not leak any gas.

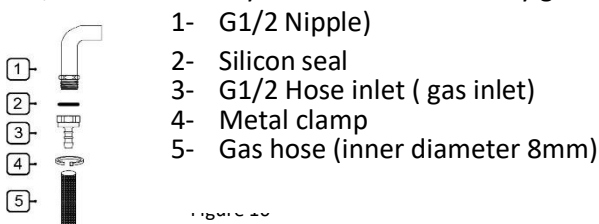

2.4.2. NG (natural gas) connection

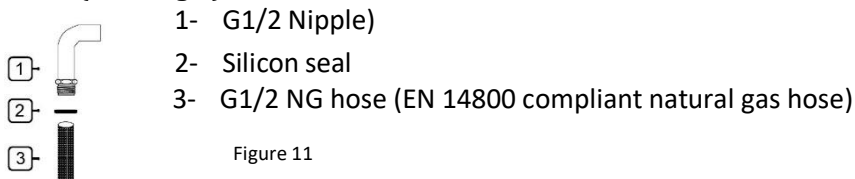


Figure 11

If your equipment is set for natural gas, get the equipment connected by the installation firm of the concerned natural gas distribution company. Natural gas connection of your equipment is 1/2". If you desire to convert your equipment from LPG to natural gas or from natural gas to LPG, contact with the nearest service centre and make them do the required gas conversion settings.

Installation Instructions for British Type Union Connection if Available



- 1- G1/2 Nipple
- 2- Silicone seal
- 3- G1/2 union
- 4- G1/2 NG hose

The British type union connection is assembled using the components shown in Figures 1 and 3.

First, the 1/2" elbow (Part 1) is mounted to the British type union (Part 3) by using a Klingrit gasket (Part 2) to ensure proper sealing. The gasket must be correctly positioned between the mating surfaces before tightening.

After assembling the elbow and the British type union together, the complete assembly is mounted onto the nipple located on the main gas pipe of the cooker. Ensure that all connections are properly aligned and tightened securely to prevent gas leakage.

After installation, check all joints for tightness and perform a gas leak test before operating the appliance.

2.5. Sealing inspection

Open the pressure-reducing valve or natural gas valve and control by application of much foamy water on the connection to find out any gas leakage.

Never control by flame.

2.6. Final inspection

1. Plug the power cable into the socket and activate the fuse of the equipment.
2. Control the functions.

2.6.1. LPG-NG / NG-LPG conversion

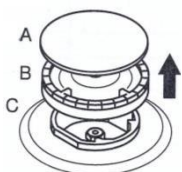


Figure 12

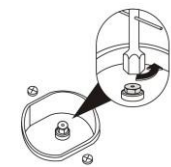


Figure 12.1



Figure 12.2

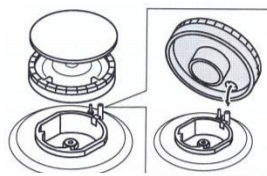


Figure 12.3



Figure 12.4

Remove the burner cover and burner as shown in the Figure 12.

Remove the injector by help of 7's socket screwdriver as shown in the Figure 12.1

Fix the injector (D) to be converted as shown in the Figure 12.2.

(see table 1).

Replace the burner as shown in the Figure 12.3.

Turn on the burners respectively after conversion and remove the button on the control panel and set the flame length by tightening or loosening the screw on the gas valve (12.4 cock) or in the valve shaft.

2.7. Disposal of the product

2.7.1. Destruction of the package

Packaging materials are dangerous for the children. Keep the packaging materials at a place not accessible by the children.

The packaging of the product is made of the recycled materials. And throw them in the garbage by sorting out as per the instructions on waste. Do not dispose them together with the normal domestic waste.

2.7.2. Future transportation operations

- Keep the product in its original box and carry the product in this box. Comply with the instructions given on the box. If the original carton is not available, wrap the product with the blister packaging material or a thick paperboard and tape it firmly.
- Fix the heads and pot supports firmly with a tape.
- Do not put any object on the product. The product should be carried upright.
- Control the general appearance of the product for any damage that might have occurred during transportation.

2.7.3. Disposal of the old product

Dispose the old product in such a way that it will not give damage to the environment.

A mark (WEEE) is present on this product, indicating that the electric and electronic equipment waste should be collected separately. This means that the equipment should be dealt with as per EU Directive 2002/96/EC to recycle or disintegrated into parts for minimising its effect on the environment. For further information, please contact with the local and regional authorities.


The electronic products which are not kept subject to the controlled waste gathering process constitute potential risk for both environment and human health due to the harmful substances they contain.

You may contact with your authorized dealer or the municipal waste collection centre to get information about how you may dispose of the product.

Before you throw the product into the garbage, cut the electrical plug and break the cover lock, if any, in order that the children are not exposed to any risk.


3. ABOUT PRODUCT:

3.1. General view

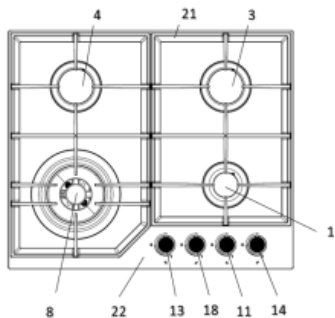


BITK260GHB

BITK260GHX

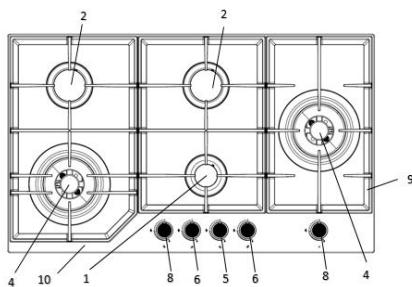

BITK290GH5X

BITK290GH5B

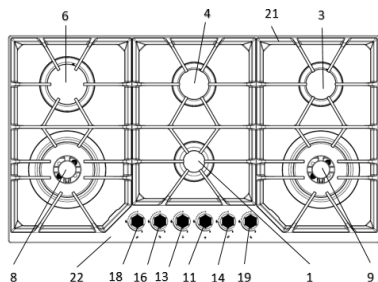

BITK290GH6B

1. Small burner
2. Mid burner
3. Big burner
4. Wok / Mini wok Burner
5. Small Burner Button
6. Mid Burner Button
7. Big Burner Button
8. Wok /Mini wok Burner Button
9. Grill
10. Top Table

3.2. Consumption values

Table 1 Consumption values (for Remay burners)

	LPG G30 - 30 mbar			NG G20 - 20 mbar			LPG G30 - 50 mbar			NG G25.3 - 25 mbar		
	Injector (mm)	Power (kW)	Consumption (g/h)	Injector (mm)	Power (kW)	Consumption (m3/h)	Injector (mm)	Power (kW)	Consumption (g/h)	Injector (mm)	Power (kW)	Consumption (m3/h)
Small Burner	Ø0,50	1,00	73	Ø0,72	1,00	0,095	Ø0,43	1,00	73	Ø0,75	1,00	0,111
Medium Burner	Ø0,72	2,00	145	Ø1,03	2,00	0,190	Ø0,62	2,00	145	Ø1,06	2,00	0,221
Big Burner	Ø0,85	2,90	211	Ø1,24	2,90	0,276	Ø0,75	2,90	211	Ø1,27	2,90	0,321

Table 1.1 Consumption values (for Sabaf burners)

	LPG G30 30 mbar			NG G20 20 mbar			LPG G30 50 mbar			NG G25.3 25 mbar		
	Injector (mm)	Power (kW)	Consumption (g/h)	Injector (mm)	Power (kW)	Consumption (m3/h)	Injector (mm)	Power (kW)	Consumption (g/h)	Injector (mm)	Power (kW)	Consumption (m3/h)
Small Burner	Ø0,50	1,00	73	Ø0,72	1,00	0,095	Ø0,43	1,00	73	Ø0,75	1,00	0,111
Medium Burner	Ø0,70	2,00	145	Ø1,03	2,00	0,190	Ø0,62	2,00	145	Ø0,97	2,00	0,221
Big Burner	Ø0,85	2,90	211	Ø1,15	2,90	0,276	Ø0,75	2,90	211	Ø1,18	2,90	0,321
Mini Wok	Ø0,82	2,50	182	Ø1,15	2,50	0,238	Ø0,73	2,50	182	Ø1,15	2,30	0,255
Wok Burner (3.8 kW)	Ø1,00	3,80	276	Ø1,50	3,80	0,362	Ø0,78	3,80	276	Ø1,45	3,80	0,421
TC Wok Burner	Ø0,95	3,40	247	Ø1,30	3,40	0,324	Ø0,73	3,20	243	Ø1,45	3,30	0,358
Wok Burner (4.2 kW)	Ø1,03	4,20	305	Ø1,55	4,20	0,400	Ø0,83	4,20	334	Ø1,50	4,20	0,465
Wok Burner (4.2 kW AFB)	Ø1,03	4,20	305	Ø1,55	4,20	0,400	Ø0,83	4,20	334	-	-	-



The firm may make change in the technical specifications to improve quality of the product without prior notice.



The figures given in the manual are schematic and may not be exactly same with your product.



The values given on the markings on the product or in the other printed documents provided with the product are values obtained under the laboratory conditions as per the applicable standards. These values may vary depending on the use and ambient conditions of the product.

4. USE OF THE RANGE

4.1. First use

Start to use the equipment after removal of the protective film on Inox surface.


4.2. First cleaning



Some detergents or cleaning agents may give harm to the surface.


1. Remove all packaging materials.
2. Wipe the product surface with a damp cloth or sponge and wipe dry with a dry cloth.

4.3. Description of use of the gas range:

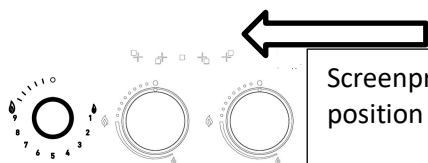


Screenprints on the control panel show position of the respective button.

- 1: Push and turn anticlockwise the gas range button for setting high flame.
- 2: Turn on the lighter depending on the characteristics of your range.
- 3: Set to the desired flame position.
- 4: When the desired cooking operation is over, bring the range button to the top point by turning it clockwise to turn off the burner.

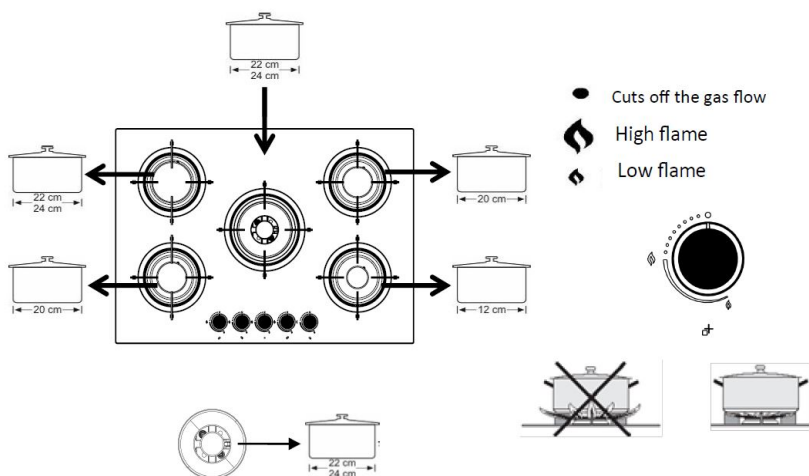

Container size and gas flame should match with each other.

4.4. Gas cut-off safety apparatus

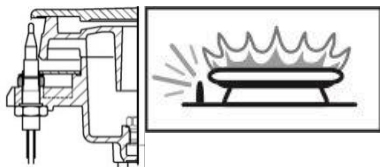

A thermal device activates the safety mechanism and immediately shuts off the gas if an overflow of liquid causes the burners to go out.

- 1: Push and turn anticlockwise the gas range button for setting high flame.
- 2: Turn on the lighter depending on the characteristics of your range.
- 3: After it turns on, hold pressed the button for 3-5 seconds and ensure the safety mechanism to activate.
- 4: If it does not turn on after you push and release the button, repeat the same action by holding the button pressed for 15 seconds.
- 5: Should the burner not ignite within fifteen seconds, cease the ignition process and attempt re-ignition after a minimum interval of one minute.
- 6: Set to the desired flame position.
- 7: When the desired cooking is completed, bring the range button to the top point by turning it clockwise to turn off the burner.

6. SUGGESTED SOLUTIONS FOR PROBLEMS

Product does not operate.

- ✓ The product is not plugged (earthed) to the socket. Make sure the equipment is plugged.
- ✓ The fuse is burn or broken. Check the fuse in the fuse box. If the fuse is burnt, activate it again.

The product ignites, but does not burn.

- ✓ Gas is over.
- ✓ Cylinder valve or natural gas valve is closed.
- ✓ In case of houses with natural gas supply, if there is gas leakage detector, the leak may be detected and gas cut off.
- ✓ Injector is clogged.

Flame burns low.

- ✓ Cylinder is over.
- ✓ Injector is clogged.

When the product heats and cools down, metallic sounds are heart.

- ✓ Metal parts expand when heated and cause sound. This is not a cause of failure.

If you cannot eliminate the problem although you performed the instructions given in this section, call your service to get support. Never attempt to repair the product that does not operate.

6.1. Cleaning the range

There is no need for any range cleaner or other special cleaning agent to clean the range. It is recommended to qipe the range with a damp cloth when it is stil likewarm.





Your Teknix appliance comes with a 2 year parts and labour guarantee – to give you the reassurance you need when purchasing a new appliance.

Before requesting a service visit, please check the troubleshooting guide in the operating instruction booklet.

For service and repairs please contact the Teknix technical helpline on: Freephone 0800 772 0614

Telephone lines are open 09.00 – 17.30 Monday to Friday

Please have your model number and serial number available before making the call.

What is covered

- All repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- The cost of all functional replacement parts.
- The labour cost of a Teknix approved repairer to carry out the repair.

What is not covered

- Transit or delivery damage.
- Accidental damage.
- Misuse, or abuse.
- Cabinet or appearance parts, including knobs.
- Accessory items, including ice trays, scrapers and cutlery baskets.
- Repairs required as a result of unauthorised repairs or incorrect installation that fails to meet the requirements contained in the operating instruction booklet.

Note

- The product is guaranteed for domestic household use only.
- Gas appliances must be installed by a Gas Safe registered Gas Installer.
- We may ask you to provide proof of purchase so we can validate the period of your Teknis guarantee.