



DW60M6050**
DW60M6051**
DW60M6040**

Dishwasher user manual

imagine the possibilities

Thank you for purchasing this Samsung product.



SAMSUNG

Safety instructions

Congratulations on your new Samsung dishwasher. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your dishwasher's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS





 
 





Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this user manual.

Warning and important safety instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your dishwasher.

Because the following operating instructions cover various models, the characteristics of your dishwasher may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

Important safety symbols

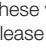	Hazards or unsafe practices that may result in severe personal injury and/or property damage.
	Hazards or unsafe practices that may result in personal injury and/or property damage.
	To reduce the risk of fire, explosion, electric shock, or personal injury when using your dishwasher, follow these basic safety precautions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the appliance is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning symbols are here to prevent injury to you and others.

Please follow them explicitly.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.




To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. **For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
6. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
7. **For use in Europe:** Children of less than 3 years should be kept away unless continuously supervised.

Safety instructions

- 8. CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- 9.** This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- 10.** The door should not be left in the open position since this could present a tripping hazard.
- 11. WARNING:** Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.


INSTRUCTIONS WHEN USING YOUR DISHWASHER

 This dishwasher is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:


- Shops
- Offices and showrooms


and by residents in establishments such as:


- Hostels and guest houses.

 It must only be used as a domestic appliance as specified in these user manual, for cleaning domestic crockery and cutlery.


Any other usage is not supported by the manufacturer and could be dangerous.


 The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

 **WARNING** Do not use solvents in the dishwasher. Danger of explosion.


 **WARNING** Do not inhale or ingest dishwasher detergent. Dishwasher detergents contain irritant or corrosive ingredients which can cause burning in the nose, mouth and throat if swallowed, or inhibit breathing. Consult a doctor immediately if detergent has been swallowed or inhaled.


 **CAUTION** Avoid leaving the door open unnecessarily, as you could trip over it.


 **CAUTION** Do not sit or lean on the opened door. This could cause the dishwasher to tip and be damaged, and you could get injured.


 Only use detergent and rinse aid formulated for domestic dishwashers. Do not use washing-up liquid.


 **CAUTION** Do not use the strong acid cleaning agent.


 Do not fill the rinse aid reservoir with powder or liquid detergent. This will cause serious damage to the reservoir.

 **CAUTION** Inadvertently filling the salt reservoir with powder or liquid dishwasher detergent will damage the water softener. Make sure you have picked up the correct packet of dishwasher salt before filling the salt reservoir.


 Please only use special coarse grained dishwasher salt for reactivation, as other salts may contain insoluble additives which can impair the functioning of the softener.

 **CAUTION** In an appliance with a cutlery basket (depending on model), cutlery is cleaned and dried more if placed in efficiently the basket with the handles downwards. However, to avoid the risk of injury, place knives and forks etc. with the handles upwards.


 Plastic items which cannot withstand being washed in hot water, such as disposable plastic containers, or plastic cutlery and crockery should not be cleaned in the dishwasher. The high temperatures in the dishwasher may cause them to melt or lose shape.


 On models with Delay Start function, make sure that the dispenser is dry before adding detergent. Wipe dry if necessary. Detergent will clog if poured into a damp dispenser and may not be thoroughly dispersed.


Safety instructions


 Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

INSTRUCTIONS FOR PROTECTING YOUR CHILDREN


 This appliance is not a toy! To avoid the risk of injury, keep children well away and do not allow them to play in or around the dishwasher or to use the controls. They will not understand the potential dangers posed by it. They should be supervised whenever you are working in the kitchen. There is also a danger that children playing might shut themselves in the dishwasher.


 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.


 Older children may only use the dishwasher when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.


 **KEEP CHILDREN AWAY FROM DETERGENTS!** Dishwasher detergents contain irritant and corrosive ingredients which can cause burning in the mouth, nose and throat if swallowed, or inhibit breathing. Keep children away from the dishwasher when the door is open. There could still be detergent residues in the cabinet. Consult a doctor immediately if your child has swallowed or inhaled detergent.

INSTRUCTIONS FOR INSTALLING YOUR DISHWASHER


 Before setting up the appliance, check it for any externally visible damage. Under no circumstances should you use a damaged appliance. A damaged appliance could be dangerous.


 The dishwasher must only be plugged into the electricity supply via a suitable switched socket. The electrical socket must be easily accessible after the dishwasher is installed so that it can be disconnected from the electricity supply at any time. (Refer to the “Parts and features” section on page 11.)

 There must be no electrical sockets behind the dishwasher. Danger of overheating and fire risk if the dishwasher were to be pushed up against a plug.


 The dishwasher must not be installed under a hob. The high radiant temperatures which are sometimes generated by a hob could damage the dishwasher. For the same reason it should not be installed next to open fires or other appliances which give off heat, such as heaters etc.


 Do not connect the dishwasher to the mains supply until it has been fully installed and any adjustment has been made to the door springs.

 Before connecting the appliance, check that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.


 The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective grounding system. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt the electrical system in the house should be checked by a qualified electrician.
The manufacturer cannot be held liable for the consequences of an inadequate grounding system (e.g. electric shock).


 Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).

 This appliance may only be installed in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer.


 The plastic housing of the water connection contains an electrical component. The housing must not be submerged in water.


 There are electrical wires in the hose of Aqua-Stop. Never cut the water inlet hose, even if it is too long.


 Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons can be dangerous. The manufacturer cannot be held liable for unauthorised work.

 The integrated waterproof system offers protection from water damage, provided the following conditions are met:


- The dishwasher is correctly installed and plumbed in.
- The dishwasher is properly maintained and parts are replaced where it can be seen that this is necessary.
- The stopcock has been turned off when the appliance is not used for a longer period of time (e.g. during holidays).
- The waterproof system will work even if the appliance is switched off. However, the appliance must remain connected to the electricity supply.

 A damaged appliance can be dangerous. If the dishwasher gets damaged, switch it off at the mains and call your dealer or the service department.


 Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by an approved service technician.


 Faulty components must only be replaced by original spare parts. Only when these parts are fitted can the safety of the appliance can be guaranteed.

 Always disconnect the dishwasher from the electrical supply for maintenance work (switch off at the wall socket and remove the plug).

 If the connection cable is damaged it must be replaced with a special cable, available from the manufacturer. For safety reasons, this must only be fitted by the service department or an authorised service technician.

Safety instructions


 **WARNING** In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.


 **CAUTION** In the event of a fault or for cleaning purposes, the appliance is only completely isolated from the electricity supply when:


- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is disconnected, or
- the screw-out fuse is removed (in countries where this is applicable).


 Do not make any alterations to the appliance, unless authorised to do so by the manufacturer.

 **CAUTION** Never open the casing/housing of the appliance.

 **CAUTION** Tempering with electrical connections or components and mechanical parts is highly dangerous and can cause operational faults or electric shock.

 While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

 **CAUTION** When installing the product, make sure there is space at the top, left, right and back of the product to ensure proper ventilation.
If there is insufficient space between the product and the sink, it may damage the sink or allow mold to grow.

 Make sure that your dishwasher's hardness level setting is correct as your area.
(Refer to the "**Water softener mode (Water hardness level setting)**" section on page **19**.)

For information on Samsung's environmental commitments and product specific regulatory obligations e.g. REACH visit: samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html

INSTRUCTION ABOUT THE WEEE MARK



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.


Contents

PARTS AND FEATURES	11	Dishwasher features
	14	Control panel
	17	Displays
USING THE DETERGENT AND WATER SOFTENER	19	Water softener mode (Water hardness level setting)
	20	Loading the salt into the softener
	21	Using detergent
	22	Using rinse aid
	23	How to use the Multi tap option
LOADING THE DISHWASHER RACKS	24	Loading the upper basket
	26	Loading the lower basket
	26	Folding spikes of lower basket
	27	Cutlery(silverware) tray
	29	For washing in the dishwasher the following cutlery/dishes
WASHING PROGRAMMES	30	Turning on the appliance
	30	Change the programme
	31	At the end of the wash cycle
	31	Wash cycle table
CLEANING AND CARE	33	Cleaning the filters
	34	Cleaning the spray arms
	34	Cleaning the door
	34	Caring for the dishwasher
	34	Protect against freezing
	35	How to maintain your dishwasher
SETTING UP YOUR DISHWASHER	36	Water supply and drain
	38	Connection of drain hoses
	38	Position the appliance
	38	Start of dishwasher
INSTALLING YOUR DISHWASHER	39	Built under, Semi built in, Fully built in Dishwasher
TROUBLESHOOTING	45	Before calling for service
	48	Error codes
APPENDIX	49	Specifications
	50	Product dimension

Parts and features

DISHWASHER FEATURES

Front & Rear view (DW60M6050**)


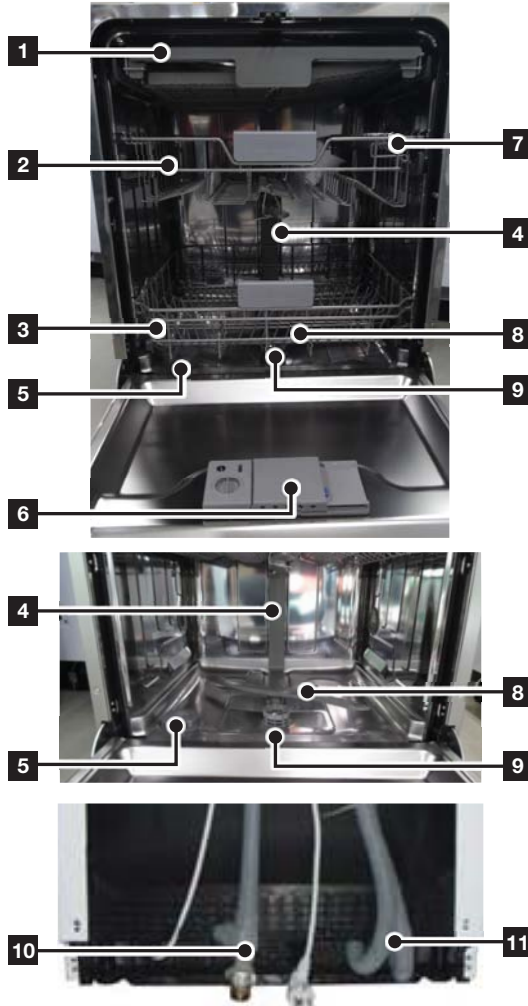


1	3rd Rack
2	Upper Basket
3	Lower Basket
4	Duct Nozzle
5	Salt Container
6	Dispenser
7	Cup Shelf
8	Spray arms
9	Filter assembly
10	Inlet hose
11	Drain hose

 Accessory parts - User manual, Salt funnel, cutlery basket.

Parts and features


Front & Rear view (DW60M6051**)

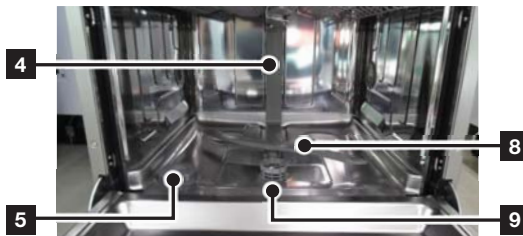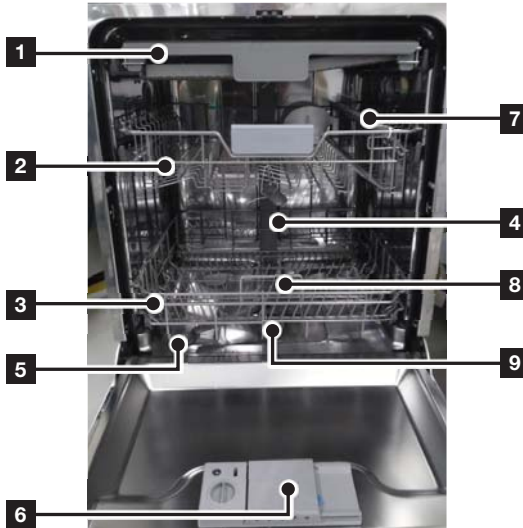

1	3rd Rack
2	Upper Basket
3	Lower Basket
4	Duct Nozzle
5	Salt Container
6	Dispenser
7	Cup Shelf
8	Spray arms
9	Filter assembly
10	Inlet hose
11	Drain hose

 Accessory parts - User manual, Salt funnel, cutlery basket.

Front & Rear view (DW60M6040**)

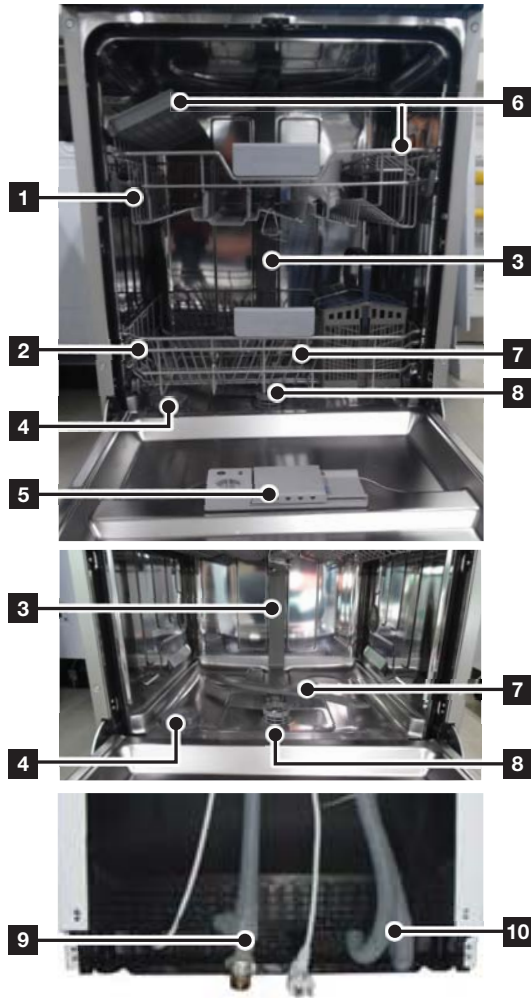


1	Upper Basket
2	Lower Basket
3	Duct Nozzle
4	Salt Container
5	Dispenser
6	Cup Shelf
7	Spray arms
8	Filter assembly
9	Drain hose
10	Inlet hose

 Accessory parts - User manual, Salt funnel, cutlery basket.

Parts and features

CONTROL PANEL

DW60M6050F*/DW60M6051F*/DW60M6040F*
 DW60M6050U*/DW60M6051U*/DW60M6040U*
 DW60M6050S*/DW60M6051S*/DW60M6040S*

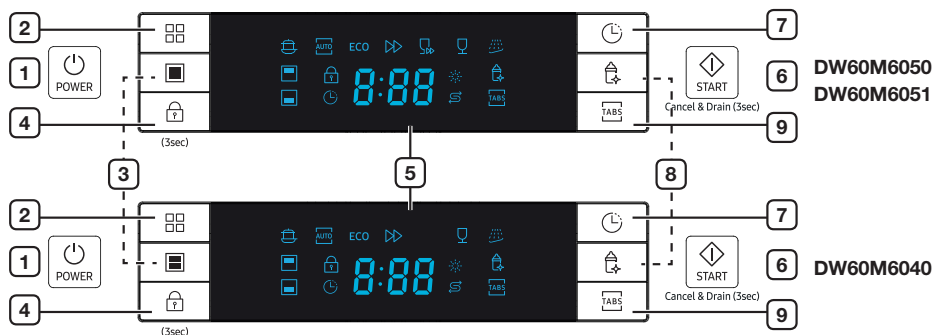


1 Power	Press this button to turn on your dishwasher: the screen lights up.
2 Program	To select washing program press this button.
3 Half load	For small amount of loading items, use either the upper or lower basket only to save energy. Press the Half load button to select the upper or lower basket.
4 Control lock	This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on the control panel, hold down both the Control lock buttons for three (3) seconds.
5 Display window	Running indicator, delay time, error codes and etc.
6 Start	To start a cycle, press the Start button before closing the door. *Reset : To cancel a currently running cycle and drain the dishwasher, press and hold the Start button for three (3) seconds. Once the dishwasher is reset, select a cycle and option, and then press Start to restart the dishwasher.
7 Delay start	Press this button to set the delayed hours for washing. You can delay the start of washing up to 24 hours. One press on this button delays the start of washing by one hours.
8 Hygiene	Push the Hygiene button for the best possible hygiene in your dishwasher. At the final rinse it heat up to 67 °C and hold this temperature for a several minutes. This function is available with all program except Quick Wash and Pre Wash.
9 Multi tab	To select Multi tap option which needs salt and rinse aid but a Multi tab tablet. This option can be selected on Intensive, Auto or ECO program only.

- When the door is open only the **Power** button will operate.
- You can select options (**Multi tap**, **Delay start** and/or **Half load**) before starting a cycle.

IMPORTANT: To get the best performance from your dishwasher, read all the operating instructions before using it for the first time.

DW60M6050BB

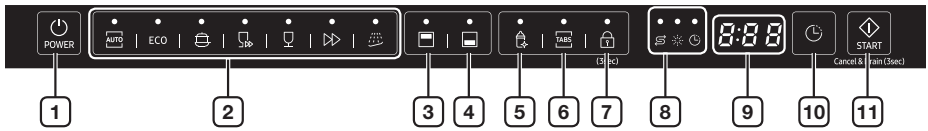





DW60M6040BB



1	Power	Press this button to turn on your dishwasher : the screen lights up.
2	Cycle	To select washing program press this button.
3	Upper	<p>When you select Upper, only the upper rack nozzle is activated. The lower nozzle will not operate. Use this feature to wash a small load of dishes or glasses placed in the upper rack.</p> <p> When you select Upper, place dishes, glasses, etc. in the upper rack only. The dishwasher will not wash items placed in the lower rack.</p> <p>Selecting Upper reduces both the cycle time and the amount of electricity consumed.</p>
4	Lower	<p>When you select Lower, only the lower rack nozzle is activated. The upper nozzle will not operate. Use this feature to wash a small load of dishes or glasses placed in the lower rack.</p> <p> When you select Lower, place items, glasses, etc. in the lower rack only. The dishwasher will not wash items placed in the upper rack.</p> <p>Selecting Lower reduces both the cycle time and the amount of electricity consumed.</p>
5	Hygiene	Push the Hygiene button for the best possible hygiene in your dishwasher. At the final rinse it heat up to 67 °C and hold this temperature for a several minutes. This function is available with all program except Quick Wash and Pre Wash.
6	Multi tab	To select Multi tab option which needs salt and rinse aid but a Multi tab tablet. This option can be used with all program except Auto, Quick Wash and Pre Wash.


Parts and features

<p>7 Control lock</p>	<p>This option allows you to lock the buttons on the control panel so children cannot accidentally start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on the control panel, hold down both the Control lock buttons for three (3) seconds.</p>
<p>8 Indicator</p>	<p>If Rinse Refill or Salt Refill indicator is lit, it means rinse or salt is needed to refill.</p> <p> Delay start Indicator</p> <ul style="list-style-type: none"> If the "Delay start" indicator is lit, it means, you select "Delay start" option. <p> Rinse Refill Indicator</p> <ul style="list-style-type: none"> If the "Rinse Refill" indicator is lit, it means the dishwasher is low on dishwasher rinse aid and requires a refill. <p> Salt Refill Indicator</p> <ul style="list-style-type: none"> If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled.
<p>9 Display</p>	<p>Display the remaining time, error code, or delay time.</p>
<p>10 Delay start</p>	<p>Press this button to set the delayed hours for washing. You can delay the start of washing up to 24 hours. One press on this button delays the start of washing by one hours.</p>
<p>11 Start</p>	<p>To start a cycle, press the Start button before closing the door. *Reset : To cancel a currently running cycle and drain the dishwasher, press and hold the Start button for three (3) seconds. Once the dishwasher is reset, select a cycle and option, and then press Start to restart the dishwasher.</p>

 You can select options (**Multi tab, Half load, Delay, Hygiene**) before starting a cycle.


 To prevent the touchpad from losing response sensitivity, follow these instructions:

- Touch the center of each keypad using one finger. Do not push.
- Clean the touch control's surface regularly with a soft, damp cloth.
- Be careful not to touch more than one touch key pad at a time, except as directed.

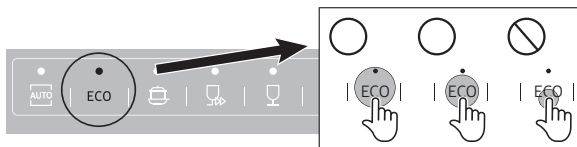

DISPLAYS

DW60M6050F*/DW60M6051F*/DW60M6040F*
 DW60M6050U*/DW60M6051U*/DW60M6040U*
 DW60M6050S*/DW60M6051S*/DW60M6040S*

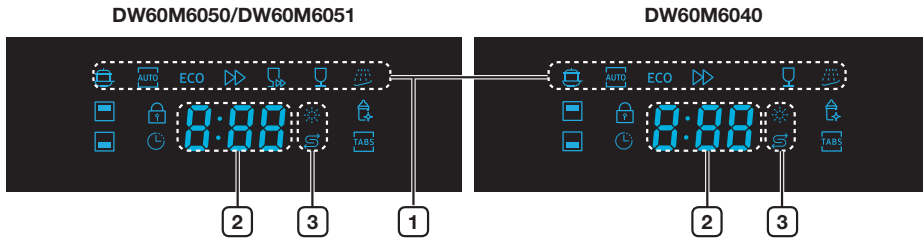

1	Program icons	Press the Program button to select each program.
	Intensive	Heavily soiled items include pots and pans
	Auto wash	Lightly to heavily soiled daily using items, automatic detection of the amount of soils.
ECO	ECO	Normally soiled daily using items, with reduced energy and water consumptions.
	Express	Normal daily used items, with short cycle time.
	Quick wash	Lightly soiled with very short cycle time. (DW60M6050/DW60M6051)
	Delicate	Lightly soiled delicate items.
	Pre wash	Cold water rinse for removing dirt before running another program.
2	Display	Display the remaining time, error code, or delay time.
3	Refill indicators	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	Rinse refill indicator	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the "When to refill the rinse aid dispenser" section on page 22.
	Salt refill indicator	If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the "Loading the salt into the softener" section on page 20.

Parts and features

DW60M6050BB/DW60M6040BB

DW60M6050



DW60M6040



1	Program icons	Press the Program button to select each program.
	Auto wash	Lightly to heavily soiled daily using items, automatic detection of the amount of soils.
ECO	ECO	Normally soiled daily using items, with reduced energy and water consumptions.
	Intensive	Heavily soiled items include pots and pans
	Quick wash	Lightly soiled with very short cycle time. (DW60M6050/DW60M6051)
	Delicate	Lightly soiled delicate items.
	Express	Normal daily used items, with short cycle time.
	Pre wash	Cold water rinse for removing dirt before running another program.
2	Refill indicators	If Rinse or Salt Refill indicator is lit, it means rinse or salt is needed to refill.
	Salt refill indicator	If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and needs to be refilled. To refill the salt reservoir, refer to the "Loading the salt into the softener" section on page 20 .
	Rinse refill indicator	If Rinse or Salt Refill indicator is lit, it means rinse or salt needs to be refilled. To refill the rinse reservoir, refer to the "Filling the rinse aid reservoir" section on page 22 .
	Delay start indicator	If the "Delay start" indicator is lit, it means, you select "Delay start" option.
3	Display	Display the remaining time, error code, or delay time.

Using the detergent and water softener

WATER SOFTENER MODE (WATER HARDNESS LEVEL SETTING)

The dishwasher is designed to allow for adjusting the amount of salt consumed based on the hardness of the water used. This is intended to optimise the level of salt consumption. To set the salt consumption, proceed as below:

1. Switch on the appliance;
2. Press the **Pre Wash or Program** button for more than 5 seconds to start the water softener set model within 60 seconds after the appliance was switched on;
 - Press the **Pre Wash or Program** button to select the proper set according to your local environment, the sets will change in the following sequence: H1 → H2 → H3 → H4 → H5 → H6; It is recommended that adjustments should be made in accordance with the following table.
* The manufactory setting: H3 (EN 50242)
3. Wait for 5 seconds to end the set up model.

WATER HARDNESS				Selector Position	Salt consumption (gram/cycle)
° dH	° fH	° Clark	mmol/l		
0-5	0-9	0-6	0-0.94	H1	0
6-11	10-20	7-14	1.0-2.0	H2	9
12-17	21-30	15-21	2.1-3.0	H3	12
18-22	31-40	22-28	3.1-4.0	H4	20
23-34	41-60	29-42	4.1-6.0	H5	30
35-55	61-98	43-69	6.1-9.8	H6	60

- ☑ 1 dH (German degree) = 0.178 mmol/l
- ☑ 1 Clark (British degree) = 0.143 mmol/l
- ☑ 1 fH (French degree) = 0.1 mmol/l

- ☑ Contact your local water board for information on the hardness of your water supply.

☑ WATER SOFTENER

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits may form on dishes and utensils. The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.

[Deposits on utensils]



Using the detergent and water softener

LOADING THE SALT INTO THE SOFTENER


Always use salt intended for use with dishwasher.

The salt container is located beneath the lower rack and should be filled as follows:

ATTENTION


- Only use salt specifically designed for use in dishwashers. All other types of salt not specifically designed for use in a dishwasher, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any caused damages.
- Only fill with salt just before starting one of the complete washing programs. This will prevent any grains of salt or salty water, which may have been split, remaining of the bottom of the machine for any period of time, which may cause corrosion.
- After the first wash cycle the control panel light expires.

1. Remove the lower basket and then unscrew and remove the cap from the salt container.

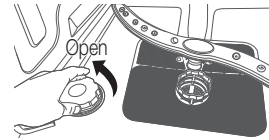


2. If you are filling the container for the first time, fill 2/3 of its volume with water (around 1 liter).


3. Place the end of the funnel (supplied) into the hole and introduce about 1.5 kg of salt. It is normal for a small amount of water to come out of the salt container.

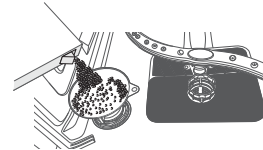

4. Carefully screw the cap back on.

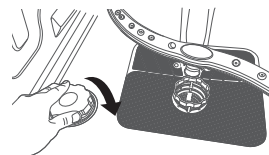

5. Usually, the salt warning light will be off after the salt container is filled with salt.

-  The salt container must be refilled when the salt warning light on the control panel comes on. Although the salt container is filled enough, the indicator light may not switch off until the salt fully dissolves. If there is no salt warning light on the control panel, you can judge when to load the salt into the softener by the cycles that the dishwasher has run.
- If a lot of salt is split inside the dishwasher, run a pre wash program to reduce the spillage.

USING DETERGENT

All dishwasher cycles require detergent in the detergent compartment.

Add the correct amount of detergent for the selected cycle to ensure the best performance.


⚠ CAUTION: Use dishwasher detergent only. Regular detergent produces too much foam, which may decrease the dishwasher's performance or cause it to malfunction.


⚠ WARNING: Do not swallow dishwasher detergent. Avoid breathing in the fumes. Dishwasher detergent contains irritants and caustic chemicals that can induce respiratory conditions. If you have swallowed dishwasher detergent or inhaled the fumes, seek medical attention immediately.

⚠ WARNING: Keep dishwasher detergent out of the reach of children.

Filling the detergent dispenser


1. Open the detergent dispenser flap by pushing the detergent dispenser release catch.

 The flap is always open at the end of a dishwashing cycle.

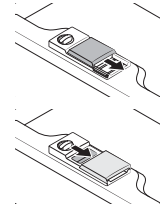


2. Add the recommended amount of detergent to the main wash detergent compartment.
3. Close the flap by sliding it to the left and then pressing it down.

 There is no separate button that is specific to using tablet detergents.

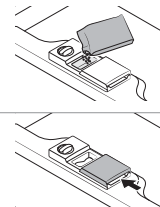

4. For better cleaning result, especially if you have very dirt items, add small amount (about 8 g) of detergent on the door. That will act in prewash phase.

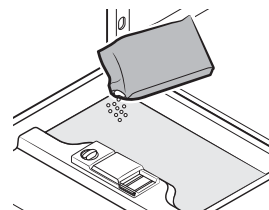

Using the detergent and water softener

USING RINSE AID

Filling the rinse aid reservoir

When the Rinse Refill indicator lights up on the control panel, refill with rinse aid. Your dishwasher has been designed to use liquid rinse aid only.


Using a powdered rinse aid will clog the reservoir opening and cause the dishwasher to malfunction.

Rinse aid improves the drying performance of the dishwasher.

⚠ CAUTION: Do not add regular detergent to the rinse aid reservoir.

1. Remove the rinse aid reservoir cap by rotating it counterclockwise.


📌 Adding rinse aid to tablet detergents will improve drying performance.

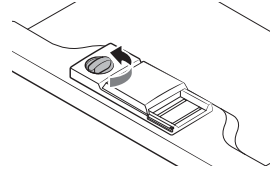

2. Fill the rinse aid reservoir with rinse aid.


📌 Use the viewing port when filling the rinse aid reservoir.

⚠ CAUTION: Do not fill the reservoir above the full level indicator. Excess rinse aid can overflow during the wash cycle.

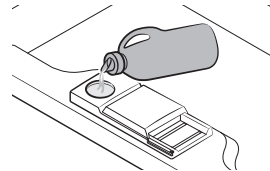


3. Turn the rinse aid indicator dial to a number between 1 and 6. The higher the number, the more rinse aid the dishwasher uses. If you are unable to rotate the rinse aid dial easily, try using a coin.

4. Close the rinse aid reservoir cap by rotating it clockwise.

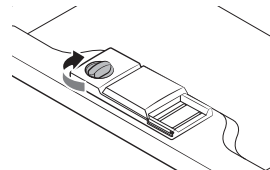



HOW TO USE THE MULTI TAP OPTION

Your dishwasher has a Multi tap option which does not need salt and rinse aid but a 3 In1 tablet. This option can select on Intensive, Eco program only.

 The Multi tap setting is only for use with Multi tap tablets. If using Multi tap tablet without this option, the appliance will not get its best performance.

1. Put the Multi tap tablet into the container then start the Multi tap option.
2. Close the lid and press until it locks in place.

 When using Multi tap compact combination detergents ensure that the lid can be closed correctly.

 **ATTENTION:** Keep all detergents in a safe place out of children's reach. Always add the detergent in the dispenser just before starting the dishwasher.



Loading the dishwasher racks

For best performance of the dishwasher, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model.

⚠ Attention before or after loading the dishwasher racks

Scrape off any large amounts of leftover food. It is not necessary to rinse the dishes under running water. Place objects in the dishwasher in the following order:

1. Items such as cups, glasses, pots/pans, etc. are stood upside down.
2. Curved items, or those with recesses, should be at a slant so that water can run off.
3. They are stacked securely and can not tip over.
4. They do not prevent the spray arms from rotating while washing takes place.


Very small items should not be washed in the dishwasher as they could easily fall out of the racks.

🗂 Removing the dishes


To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first and then the upper basket.

LOADING THE UPPER BASKET

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water. Always place glasses, cups & bowls upside down.

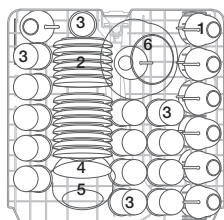

DW60M6050
DW60M6051
(14 place setting)

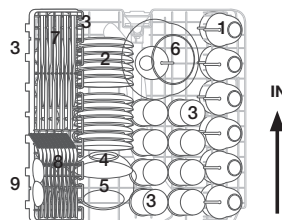

DW60M6040
(13 place setting)



Cups
1
2
Saucers



3
Glasses



4
Small serving bowl



5
Medium serving bowl



6
Large serving bowl



7
Knives



8
Forks




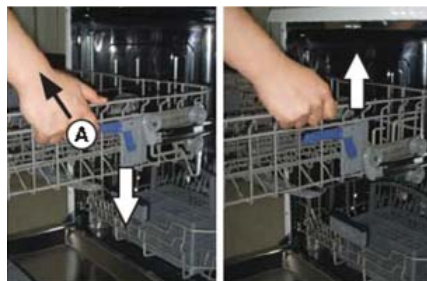
9
Soup spoons

Adjusting the Upper Basket

The height of the upper basket can be adjusted in order to create more space for large utensils both for the upper/lower basket.

1. To lower the upper rack, press the "A" levers located at the left and right sides of the upper basket and push the upper basket downwards slightly at the same time.
2. To raise the upper rack, just pull the upper basket upwards without operating any levers.

 **CAUTION:** We recommend adjusting the height of the upper basket before loading dishes into the basket. If you adjust the the basket after loading the dishes, you may damage the dishes.



To lower position

To upper position

Loading the dishwasher racks


LOADING THE LOWER BASKET

We recommend that you place large items which are most difficult to clean in to the lower rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.


It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm. Pots, serving bowls, etc. must always be placed top down.

Deep pots should be slanted to allow water to flow out.

The bottom rack feature fold down tine rows so that larger or more pots and pans can be loaded.

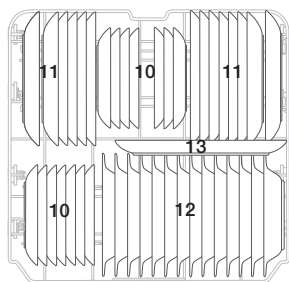

DW60M6050
DW60M6051
(14 place setting)

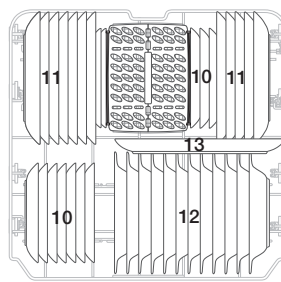

DW60M6040
(13 place setting)



Dessert dishes




Dinner plates



Soup bowls



Oval platter

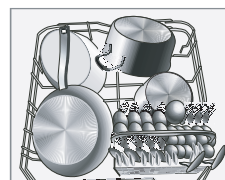


 Long items, serving cutlery, salad servers and big knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms.

FOLDING SPIKES OF LOWER BASKET

For better stacking of pots and pans, the spikes can be folded down and/or removable tine as show in the picture below.



DW60M6050
DW60M6051

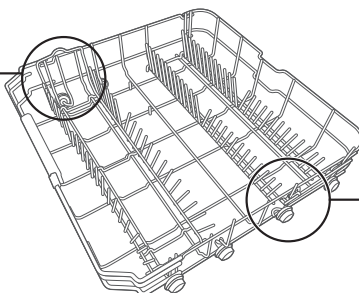








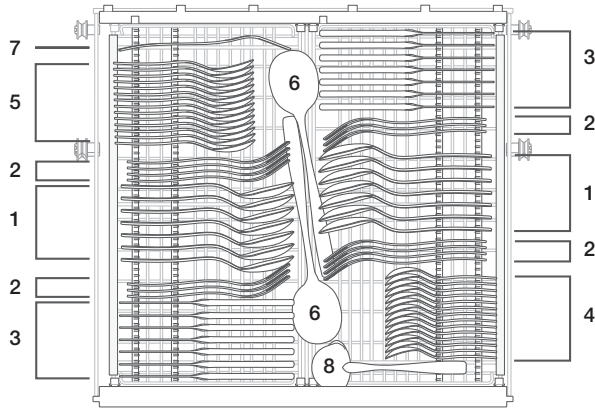

DW60M6050
DW60M6051
DW60M6040

CUTLERY(SILVERWARE) TRAY

Silverware should be placed in the cutlery tray with handles at the bottom: The spoon should be loaded individually into the appropriate slots, especially long utensils should be placed in the horizontal position at the front of the upper basket.

DW60M6050**/DW60M6051**



1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	











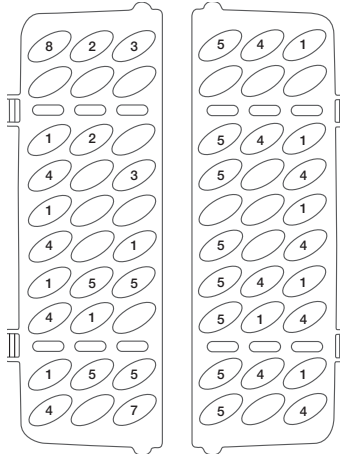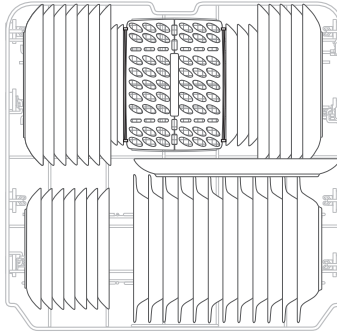

WARNING

- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

Loading the dishwasher racks

DW60M6040**



1	Soup spoons		5	Dessert spoons	
2	Forks		6	Serving spoons	
3	Knives		7	Serving forks	
4	Teaspoons		8	Gravy ladles	





WARNING

- Do not let any item extend through the bottom.
- Always load sharp utensils with the sharp point down!

FOR WASHING IN THE DISHWASHER THE FOLLOWING CUTLERY/ DISHES


Are not suitable	Are of limited suitability
Plastic items that are not heat resistant. Older cutlery with glued parts that is not temperature resistant. Bonded cutlery items or dishes. Pewter or cooper items Lead crystal glass. Steel items subject to rusting. Wooden platters. Items made from synthetic fibres.	Some types of glasses can become dull after a large number of washes. Silver and aluminium parts have a tendency to discolour during washing. Glazed patterns may fade if machine washed frequently.

-  Do not try and wash items soiled with cigarette ash, candle wax, lacquer or paint. If you buy new dishes please make sure that they are suitable for dishwashers.
-  Please do not overload your dishwasher. There is only space for 12 standard dishes. Do not use dishes that are not suitable for dishwashers. This is important for good results and for reasonable energy consumption.

When loading the dishes and cutlery

Dishes and cutlery must not impede the rotation of the spray arms.

Load hollow items such as cups, glasses, pans etc. with the opening downwards so that water cannot collect in the container or a deep base.

-  Dishes and items of cutlery must not lie inside one another, or cover each other
 - To avoid damage to glasses, they must not touch.
 - Load large items which are most difficult to clean into the lower rack.
 - The upper rack is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.

ATTENTION

Long bladed knives stored in an upright position are a potential hazard!
 Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.

Damage to glassware and other dishes.

Possible causes	Suggested remedy
<ul style="list-style-type: none"> • Type of glass or manufacturing process. Chemical composition of detergent. • Water temperature and duration of dishwasher programme. 	<ul style="list-style-type: none"> • Use glassware or porcelain dishes that have been marked dishwasher-proof by the manufacturer. • Use a mild detergent that is described as kind of dishes. If necessary, seek further information from detergent manufacturers. • Select a programme with as low a temperature. • To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after the programme has ended.

Washing programmes

TURNING ON THE APPLIANCE

Starting a cycle wash

1. Draw out the lower and upper basket, load the dishes and push them back..
It is recommended to load the lower basket first, then the upper one (see the section entitled "Loading the dishwasher racks").
2. Pour in the detergent (see the section entitled "Using the detergent and water softener").
3. Insert the plug into the socket. The power supply is 220-240 V~, 50 Hz, the specification of the socket is 10 A 250 VAC. Make sure that the water supply is turned on to proper pressure.
4. Close the door, press the **Power** button, to switch on the machine.



A click could be heard when the door is closed perfectly. When the washing is over, you can shut off the switch by pressing **Power** button.

CHANGE THE PROGRAMME

Premise:

1. A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the section entitled "Filling the detergent dispenser").
2. Press **Power** button or **Reset** button 3 seconds to cancel the programme, and turn on it again, then you can change the programme to the desired cycle setting.



If you open the door during a wash cycle, the machine will pause. The program light will stop blinking and the buzzer will beep every minute unless you close the door. After you close the door, the machine will keep on working after 3 seconds automatically.

If your model has broken memory function, the machine will go on to finish the selected program after the power cut.

Add a dish

A forgotten dish can be added at any time before the detergent dispenser opens.

1. Open the door a little to stop the washing.
2. After the spray arms stop working, you can open the door completely.
3. Add forgotten dishes.
4. Close the door, the dishwasher will work after ten seconds.




WARNING: It is dangerous to open the door when washing, because the hot water may scald you. If the door is opened while the dishwasher is running, a safety mechanism is activated and stops the cycle.

AT THE END OF THE WASH CYCLE

When the working cycle has finished, the buzzer of dishwasher will beep shortly, then stop. In the digital display appears "0", only in this case the programme has ended.

1. Switch off the dishwasher by pressing the **Power** button.
2. Turn off the water tap!

 **Open the door carefully. Hot steam may escape when the door is opened!**

- Hot dishes are sensitive to knocks. The dishes should be allowed to cool down around 15 minutes before removing from the appliance.
- Open the dishwasher's door, leave it and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.
- Unloading the dishwasher.



It is normal that the dishwasher is wet inside.

Empty the lower basket first and then the upper one. This will avoid water dripping from the upper basket onto the dishes in the lower one.


WASH CYCLE TABLE

DW60M6050**/DW60M6051**/DW60M6040**

Program	Description of Cycle	Detergent (Prewash/Main wash) (g)	Running time (min)	Energy (kWh)	Water (ℓ)
Intensive	Pre Wash (50 °C)	5/30	175	1.6	17.5
	Wash (60 °C)				
	Rinse				
	Rinse				
	Rinse (70 °C)				
	Drying				
Intensive + Hygiene	Pre Wash (50 °C)	5/30	200	1.65	17.5
	Wash (60 °C)				
	Rinse				
	Rinse				
	Rinse (70 °C)				
	Drying				
ECO *	Pre Wash	5/30	225	0.93	10.5
	Wash (50 °C)				
	Rinse (55 °C)				
	Drying				
	Drying				
ECO + Hygiene	Pre Wash	5/30	235	1.1	10.5
	Wash (50 °C)				
	Rinse (60 °C)				
	Drying				
	Drying				
Delicate	Pre Wash	5/30	130	0.9	13
	Wash (40 °C)				
	Rinse				
	Rinse (60 °C)				
	Drying				
Delicate + Hygiene	Pre Wash	5/30	140	1.0	13
	Wash (40 °C)				
	Rinse				
	Rinse (65 °C)				
	Drying				


Washing programmes

Program	Description of Cycle	Detergent (Prewash/Main wash) (g)	Running time (min)	Energy (kWh)	Water (ℓ)
Express	Pre Wash (50 °C)	5/30	60	1.15	10
	Wash (60 °C)				
	Rinse (60 °C)				
	Drying				
Express + Hygiene	Pre Wash (50 °C)	5/30	80	1.25	10
	Wash (60 °C)				
	Rinse (65 °C)				
	Drying				
Quick Wash (DW60M6050**/ DW60M6051**)	Wash (45 °C)	25	30	0.75	11
	Rinse (50 °C)				
	Rinse (55 °C)				
Auto	Pre Wash (45 °C)	5/30	150	0.9-1.3	11-15
	Auto (45-55 °C)				
	Rinse				
	Rinse (65 °C)				
	Drying				
Pre Wash	Pre Wash	/	15	0.02	4

 * EN 50242: This program is the test cycle. The information for comparability test in accordance with EN 50242, as follows;

- Capacity: 12 place setting
- Position of Upper Basket: to lower position
- Rinse aid setting: 4

 The wash time varies depending on the pressure and temperature of the supplied water.

 Quick Wash: Continuous use of the Quick Wash cycle for an extended time is not recommended. This may reduce the performance of the water softener.


Cleaning and care

CLEANING THE FILTERS

Filtering system

For your convenience, we have placed the drain pump and filtering system within easy reach inside the tub. There are three components of the filtering system: the main filter, the coarse filter, and the fine filter.

1. **Main filter:** Food and soil particles trapped by this filter are pulverized by a special jet on the lower spray arm and washed down the drain.
2. **Coarse filter:** Larger items, such as pieces of bone or glass, that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, gently squeeze the tabs on top of this filter and lift it out.
3. **Fine filter:** This filter holds soil and food residue in the sump area and prevents it from being redeposited on the dishes during a cycle.

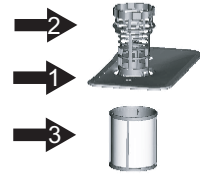


⚠ ATTENTION: Do not put the fine filter upside down.

Filter assembly

For best performance and results, the filter assembly must be cleaned. The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. To remove the filter assembly, turn it in anti-clockwise direction and lift the filter assembly up. The entire filter assembly should be cleaned regularly.

To clean the coarse filter and the fine filter, use a cleaning brush. Then, reinsert the entire assembly in the dishwasher, positioning in its seat, pressing downward, turning it clockwise direction.

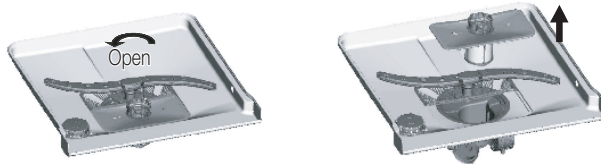


The dishwasher must never be used without the filters. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

⚠ WARNING: Never run the dishwasher without the filters in place. When cleaning the filters, do not damage them. Otherwise the filters may not perform as intended and poor wash results or damage to the internal parts may be encountered.

Cleaning and care

CLEANING THE SPRAY ARMS

It is necessary to clean the spray arms regularly as hard water chemicals may clog the spray arm jets and bearings. To remove the middle spray arm, hold the nut, rotate the arm clockwise to remove it. To remove the lower spray arm, pull out the spray arm upward. Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

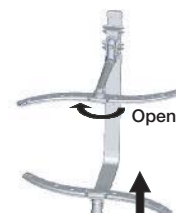

CLEANING THE DOOR

To clean the edge around the door, you should use only a soft warm, damp rag.

Also, never use abrasive cleaners or scouring pads on the outer surfaces because they will scratch the finish. Some papers towels can also scratch or leave marks on the surface.

⚠ WARNING: Never use a spray cleaner to clean the door panel for it could damage the door lock and electrical components. It is not advised to use the abrasive agent or some paper towel because of the risk of scratching or leaving spots on the stainless steel surface.

CARING FOR THE DISHWASHER

To clean the control panel use a lightly damp cloth then dry thoroughly. To clean the exterior use a good appliance polish wax.

Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

PROTECT AGAINST FREEZING

If your dishwasher is left in an unheated place during the winter:

1. Cut off electrical power to the dishwasher.
2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
3. Drain water from the inlet pipe and water valve. (Use a pan to catch the water)
4. Reconnect the water inlet pipe to the water valve.
5. Remove the filter in the tub the bottom and use a sponge sock up water.

HOW TO MAINTAIN YOUR DISHWASHER

- **After Every Wash**
After every wash, turn off the water supply to the appliance and leave the door slightly ajar so that moisture and odours not trapped inside.
- **Remove the Plug**
Before cleaning or performing maintenance, always remove the plug from the socket.
- **No Solvents or Abrasive cleaning**
To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Use only a cloth and warm soapy water. To remove spots or stains from the surface of the interior, Use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.
- **When You Go on Holiday**
When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odours from forming within the appliance.
- **Moving the Appliance**
If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.
- **Seals**
One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

Setting up your dishwasher



WARNING : Electrical shock hazard

Disconnect electrical power before installing dishwasher.
Failure to do so could result in death or electrical shock.



ATTENTION: The installation of the pipes and electrical equipments should be done by professionals.

About electricity connecting



CAUTION, for personal safety:

DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE.
DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE POWER CORD.

Electrical requirements

- An 220-240 V~, 50 Hz fuse or a circuit breaker.
- An individual branch circuit serving your dishwasher.

Grounding instructions



Insure proper ground exists before use



This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.



WARNING: Improper connection of the equipment grounding conductor can result in the risk of an electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance.

WATER SUPPLY AND DRAIN

Cold water connection

Connect the cold water supply hose to a threaded 3/4 (inch) connector and make sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.



Provided water supply hose has the aqua-safe system.
Ensure that water supply hose's aqua-safe pipe is connected to the faucet.



Hot water connection

The water supply to the appliance can also be connected to the house hot water line (centralized system, heating system), as long as it does not exceed a temperature of 60 °C. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line.



Positioning the appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

How to drain excess water from hoses

If the sink is 1000 mm higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water inlet hose is not kinked or squashed.

Extension hose

If you need a drain hose extension, Use a similar size and quality drain hose.

It must be no longer than 4 metres; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon connection

The waste connection must be at a height of between 40 cm (minimum) and 100 cm (maximum) from the bottom of the dishwasher. The water drain hose should be fixed by a hose clip.

Aqua-safe


The Aqua-safe System is a safety valve system, preventing water leaks. If the water inlet hose starts to leak anytime, the safety valve cuts off the running water. If the water inlet hose or the safety valve is damaged, remove and replace it.

Do not enlarge or shorten the inlet hose.

Setting up your dishwasher

CONNECTION OF DRAIN HOSES

Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The top of the hose must be at a height between 40 and 100 cm. The free end of the hose must not be immersed in water to avoid the back flow of it.

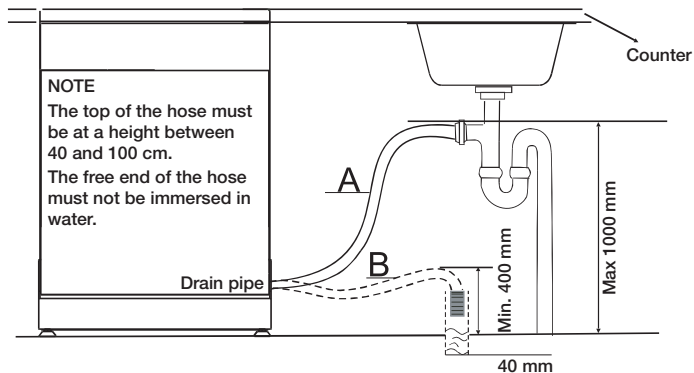


POSITION THE APPLIANCE

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

Levelling the Appliance

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2°.

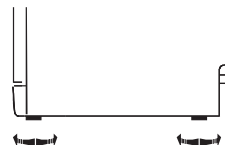

START OF DISHWASHER

The following should be checked before starting the dishwasher.

1. the dishwasher is level and fixed
2. the inlet valve is opened
3. There is no leakage at the connections of the conducts
4. the wires are tightly connected
5. the power is switched on
6. the inlet and drain hoses are not knotted
7. All packaging materials and printings have been taken out of the dishwasher

⚠ ATTENTION: After installation please put this manual in a safe place. The contents of this manual can be useful to users.

Installing your dishwasher

BUILT UNDER, SEMI BUILT IN, FULLY BUILT IN DISHWASHER

Be sure that you or your installer follow these instructions closely so that your new dishwasher works properly and that you're not at risk of injury when washing dishes.


New installation


If the dishwasher is a new installation, most of the installation work must be done before the dishwasher is moved into place.

Replacement


If the dishwasher is replacing an old dishwasher, you must check the existing dishwasher connections for compatibility with the new dishwasher. Replace the existing connections as necessary.

STEP 1. SELECTING THE BEST LOCATION FOR THE DISHWASHER


 The installation position of dishwasher should be near the existing inlet and drain hoses and power cord.


 One side of the cabinet sink should be chosen to facilitate the connection of drain hoses of the dishwasher.

1. Choose a place near the sink to facilitate the installation of inlet and drain hoses.
2. Less than 5 mm between the top of dishwasher and cabinet and the outer door aligned to cabinet.

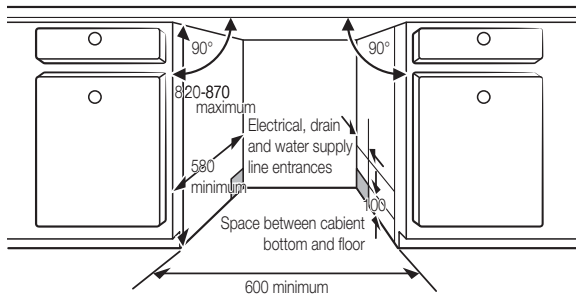

3. If dishwasher is installed at the corner of the cabinet, there should be some space when the door is opened.

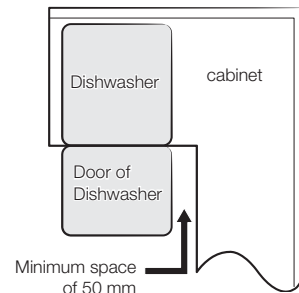

 Depending on where your electrical outlet is, you may need to cut a hole in the opposite cabinet side.

Installing your dishwasher

STEP 2. CHECKING WATER SUPPLY AND ELECTRICAL REQUIREMENTS




- The water supply line pressure must be between 0.04-1.0 MPa.
- Supply cold water only. Make sure that the water temperature does not exceed 60 °C.
- Do not supply hot water. Otherwise, the product may malfunction.



- Use a rated power of 220-240 V~, 50 Hz.
- Install the product while the power cord is unplugged.
- Use a power outlet with a maximum allowable current of 16 A. (The maximum current for this dishwasher is 11 A.)
- When powering the dishwasher, ensure that your power supply has:
 - An 220-240 V~, 50 Hz fuse or circuit breaker.
 - An individual branch circuit serving your dishwasher.
- After the installation, check if the power cord is not bent or damaged.
- Ensure that the water supply valve is turned off before connecting the water supply line to the dishwasher.
- Seal the water supply line connections using teflon tape or sealing compound to stop any water leakage.

STEP 3. PREPARING THE CUSTOM PANEL (FOR FULLY BUILT IN AND SEMI BUILT IN DISHWASHER)


The custom panel should be processed in accordance with the illustrated dimensions.

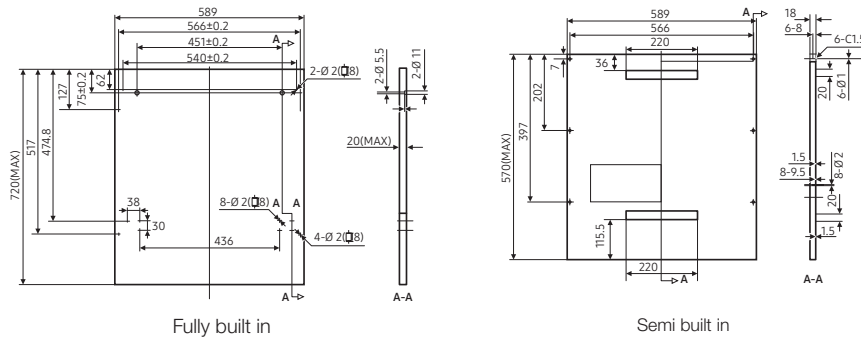


Fully built in

1. Install the hook on the custom wooden panel and put the hook into the slot of the outer door of dishwasher.
2. After positioning of the panel, fix the panel onto the outer door by screws and bolts.

⚠ CAUTION: Use a custom panel between 3~7 kg.

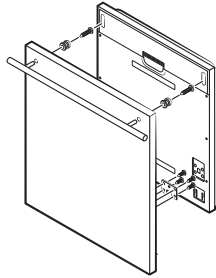

Take away the four short screws.

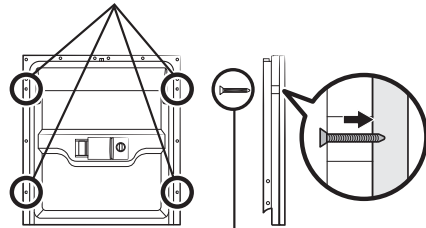


Pin up the four long screws.


Semi built in

1. Magical paster A and magical paster B be disjoined on, magical paster A on the custom wooden panel and felted magical paster B of the outer door of dishwasher.
2. After positioning of the panel, fix the panel onto the outer door by screws and bolts.

⚠ CAUTION: Use a custom panel between 3~6 kg.

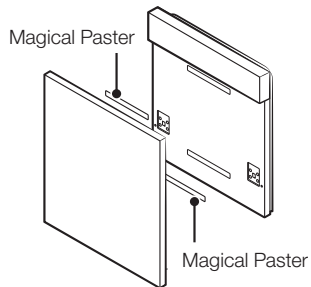


Take away the four short screws.

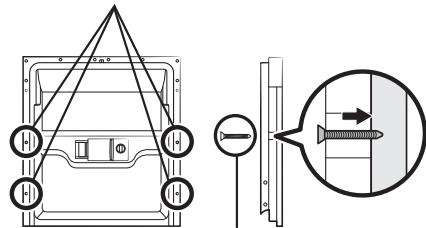

Pin up the four long screws.


Installing your dishwasher

STEP 4. TENSION ADJUSTMENT OF THE DOOR SPRING (FOR FULLY BUILT IN AND SEMI BUILT IN DISHWASHER)

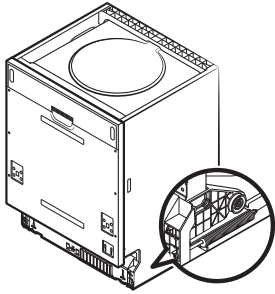

1. The door springs are set at the factory to the proper tension for the outer door. If custom wooden panel are installed, you will have to adjust the door spring tension. Rotate the adjusting screw to drive the adjustor to strain or relax the steel cable.
2. Door spring tension is correct when the door remains horizontal in the fully opened position yet rises to a close with the slight lift of a finger.


STEP 5. DISHWASHER INSTALLATION

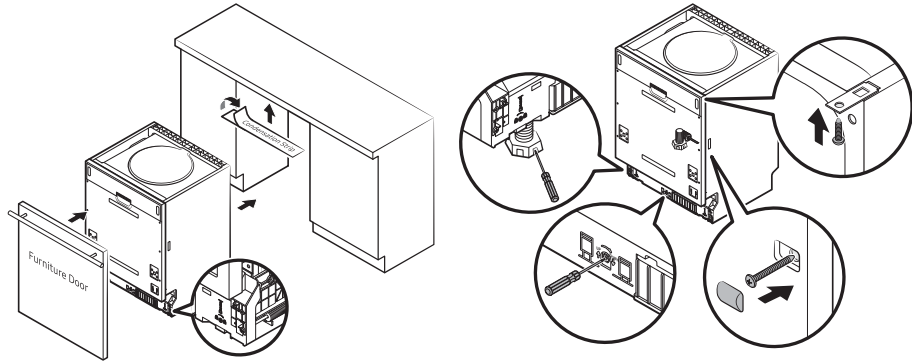

1. Install the furniture door to the outer door of the dishwasher using the brackets provided. Refer to the template for positioning of the brackets. (For Fully built in and Semi built in dishwasher)
2. Adjust the tension of the door springs by using an Allen key turning in a clockwise motion to tight en the left and right door springs. Failure to do this could cause damage to your dishwasher. (For Fully built in and Semi built in dishwasher)
3. Connect the inlet hose to the cold water supply.
4. Connect the drain hose. Refer to diagram.
5. Connect the power cord.
6. Affix the condensation strip under the work surface of cabinet. Please ensure the condensation strip is flush with edge of work surface.
7. Place the dishwasher into position.
8. Level the dishwasher. The rear foot can be adjusted from the front of the dishwasher by turning the Allen screw in the middle of the base of dishwasher use an Allen key. To adjust the front feet, use a flat screw driver and turn the front feet until the dishwasher is level.
9. The dishwasher must be secured in place. There are two ways to do this:
 - A. Normal work surface : Put the installation hook into the slot of the side plane and secure it to the work surface with the wood screws.
 - B. Marble or granite work top : Fix the side with Screw.

Installing your dishwasher


STEP 6. LEVELLING THE DISHWASHER

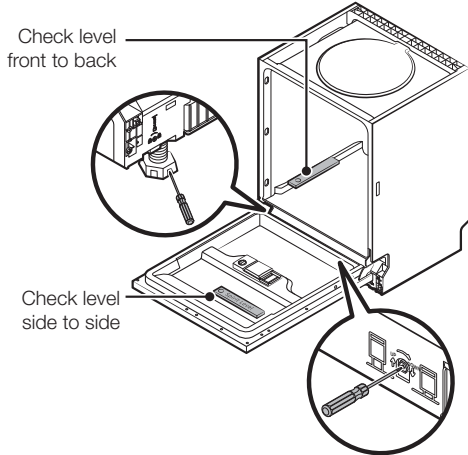

Dishwasher must be level for proper dish rack operation and wash performance.

1. Place a spirit level on door and rack track inside the tub as shown to check that the dishwasher is level.
2. Level the dishwasher by adjusting the three levelling legs individually.
3. When level the dishwasher, please pay attention not to let the dishwasher tip over.

If the height of the leg is not high enough, use extra feet.

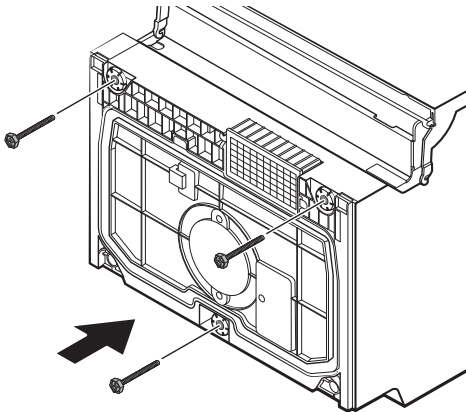

Troubleshooting

The manufacturer, following a policy of constant development and up-dating of the product, may make modifications without giving prior notice.


BEFORE CALLING FOR SERVICE

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Dishwasher doesn't run	<ul style="list-style-type: none"> Fuse blown or the circuit breaker acted. 	<ul style="list-style-type: none"> Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.
	<ul style="list-style-type: none"> Power supply is not turned on. 	<ul style="list-style-type: none"> Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.
	<ul style="list-style-type: none"> Water pressure is low. 	<ul style="list-style-type: none"> Check that the water supply is connected properly and the water is turned on.
Drain pump doesn't stop	<ul style="list-style-type: none"> Overflow. 	<ul style="list-style-type: none"> The system is designed to detect an overflow. When it does, it shuts off the circulation pump and turns on the drain pump.
Noise	<ul style="list-style-type: none"> Some audible sounds are normal. 	<ul style="list-style-type: none"> Sound from soft food shredding action and detergent cup opening.
	<ul style="list-style-type: none"> Utensils are not secure in the baskets or something small has dropped into the basket. 	<ul style="list-style-type: none"> To ensure everything is secured in the dishwasher.
	<ul style="list-style-type: none"> Motor hums. 	<ul style="list-style-type: none"> Dishwasher has not been used regularly. If you do not use it often, remember to set it to fill and pump out every week, which will help keep the seal moist.
Suds in the tub	<ul style="list-style-type: none"> Improper detergent. 	<ul style="list-style-type: none"> Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then start the "soak" wash cycle to drain out the water. Repeat if necessary.
	<ul style="list-style-type: none"> Spilled rinse agent. 	<ul style="list-style-type: none"> Always wipe up rinse agent spills immediately.
Stained tub interior	<ul style="list-style-type: none"> Detergent with colorant was used. 	<ul style="list-style-type: none"> Make sure that the detergent is the one without colorant.
Dishes are not dried	<ul style="list-style-type: none"> Rinse agent dispenser is empty. 	<ul style="list-style-type: none"> Make sure that the rinse agent dispense is filled.
Dishes and flatware not clean	<ul style="list-style-type: none"> Improper program. 	<ul style="list-style-type: none"> Select a more intensive wash program.
	<ul style="list-style-type: none"> Improper rack loading. 	<ul style="list-style-type: none"> Make sure that the action of the detergent dispenser and spray arms are not blocked by large dishware.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Spots and filming on glasses and flatware	<ol style="list-style-type: none"> 1. Extremely hard water. 2. Low inlet temperature. 3. Overloading the dishwasher. 4. Improper loading. 5. Old or damp powder detergent. 6. Empty rinse agent dispenser. 7. Incorrect dosage of detergent. 	<p>To remove spots from glassware:</p> <ol style="list-style-type: none"> 1. Take out all metal utensils out of the dishwasher. 2. Do not add detergent. 3. Choose the longest cycle. 4. Start the dishwasher and allow it to run for about 18 to 22 minutes, then it will be in the main wash. 5. Open the door to pour 2 cups of white vinegar into the bottom of the dishwasher. 6. Close the door and let the dishwasher complete the cycle. If the vinegar does not work: Repeat as above, except use 1/4 cup (60 ml) of citric acid crystals instead of vinegar.
Cloudiness on glassware	<ul style="list-style-type: none"> • Combination of soft water and too much detergent. 	<ul style="list-style-type: none"> • Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean.
Yellow or brown film on inside surfaces	<ul style="list-style-type: none"> • Tea or coffee stains. 	<ul style="list-style-type: none"> • Using a solution of 1/2 cup of bleach and 3 cups warm water to remove the stains by hand. <p>⚠ WARNING: You have to wait for 20 minutes after a cycle to let the heating elements cool down before cleaning interior; Failing to follow this instruct may result in the risk of burns.</p>
	<ul style="list-style-type: none"> • Iron deposits in water can cause an overall film. 	<ul style="list-style-type: none"> • You have to call a water softener company for a special filter.
White film on inside surface	<ul style="list-style-type: none"> • Hard water minerals. 	<ul style="list-style-type: none"> • To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.
Detergent cup lid won't latch	<ul style="list-style-type: none"> • Dial is not in the OFF position. 	<ul style="list-style-type: none"> • Turn the Dial to OFF position and slide the door latch to the left.
Detergent left in dispenser cups	<ul style="list-style-type: none"> • Dishes block detergent cups. 	<ul style="list-style-type: none"> • Re-loading the dishes properly.
Steam	<ul style="list-style-type: none"> • Normal phenomenon. 	<ul style="list-style-type: none"> • There is some steam coming through the vent by the door latch during drying and water draining.
Black or gray marks on dishes	<ul style="list-style-type: none"> • Aluminum utensils have rubbed against dishes. 	<ul style="list-style-type: none"> • Use a mild abrasive cleaner to eliminate those marks.
Water standing in the bottom of the tub	<ul style="list-style-type: none"> • This is normal. 	<ul style="list-style-type: none"> • A small amount of clean water around the outlet on the tub bottom keeps the water seal lubricated.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Dishwasher leaks	<ul style="list-style-type: none"> • Overfill dispenser or rinse aid spills. 	<ul style="list-style-type: none"> • Be careful not to overfill the rinse aid dispenser. Spilled rinse aid could cause overusing and lead to overflowing. Wipe away any spills with a damp cloth.
	<ul style="list-style-type: none"> • Dishwasher isn't level. 	<ul style="list-style-type: none"> • Make sure the dishwasher is level.
Buttons are not working on power on state	<ul style="list-style-type: none"> • Door is open. 	<ul style="list-style-type: none"> • When door is opened, buttons are not working except Power button. Close the door and press the button.
	<ul style="list-style-type: none"> • Control lock function is selected. 	<ul style="list-style-type: none"> • When selected Control lock function, buttons are not responded. To unlock this function, hold down both the Multi tap and Delay start buttons for three (3) seconds. Also, Control lock function is released when power cord is reconnected.


 The result of washing performance may be caused by a power supply issue. Try another program before contacting for service.

Troubleshooting

ERROR CODES

If an error occurs an error code may be displayed to inform you:

Codes	Meanings	Possible Causes
4C	Water supply check	Faucets is not opened, or water intake is restricted, or water pressure is too low
LC	Leakage	Some element of dishwasher leaks.
HC	Not reaching required temperature	Malfunction of heating element
PC	Divider valve failed	Divider valve failed
AC	Failure of communication between main PCB with sub PCB	Open circuit or break wiring for the communication
bC2	Button pressed long time	Button pressed 30 seconds

 **WARNING:** If overflow occurs, turn off the main water supply before calling a service. If there is water in the base pan because of an over fill or small leak, the water should be removed before restarting the dishwasher.


Appendix

SPECIFICATIONS


Model	DW60M6050FS/ DW60M6050FW DW60M6040FS/ DW60M6040FW	DW60M6050US DW60M6050UW DW60M6051US DW60M6051UW DW60M6040US DW60M6040UW	DW60M6050SS	DW60M6050BB DW60M6040BB
Type	Freestanding	Built Under	Semi Built in	Fully Built in
Power	220-240 V~, 50 Hz			
Water pressure	0.04-1.0 Mpa			
Rated power usage	1760-2100 W			
Hot water connection	Max 60 °C			
Dry type	Condensed dry system			
Wash type	Rotating nozzle spray			
Dimensions (Width x Depth x Height)	598 x 600 x 845 mm	598 x 570 x 815 mm	598 x 550 x 815 mm	
Wash capacity	DW60M6050	14 place setting		
	DW60M6051	14 place setting		
	DW60M6040	13 place setting		
Weight	Freestanding	Unpacked 50 kg		
	Built Under	Unpacked 43 kg		
	Semi Built in			
	Fully Built in			

Appendix


PRODUCT DIMENSION

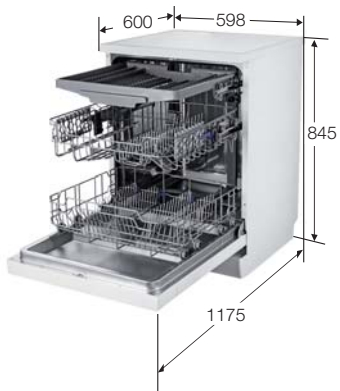

DW60M6050FS/DW60M6050FW
DW60M6040FS/DW60M6040FW

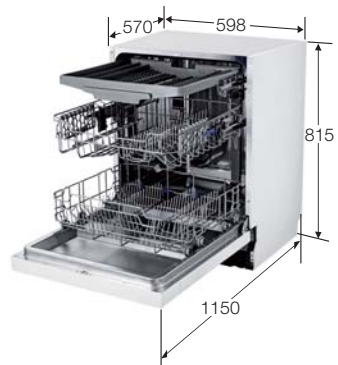


DW60M6050US/DW60M6050UW
DW60M6051US/DW60M6051UW
DW60M6040US/DW60M6040UW
DW60M6050SS

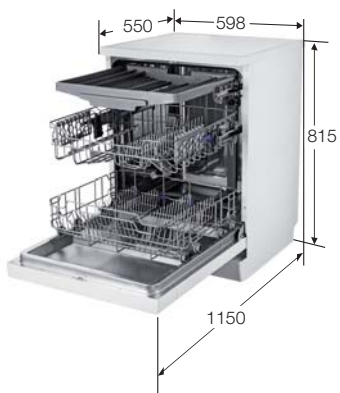

DW60M6050BB/DW60M6040BB


For standard test

DW60M6050**/DW60M6051**


 The information for comparability test in accordance with EN 50242, as follows:
The diagrams below show the proper way to load the baskets based on the European Standards (EN50242).

- Washing capacity: 14 place settings
- Test standard: EN50242/ IEC60436
- Position of upper basket: to lower position
- Wash cycle: Eco
- Additional options: None
- Rinse aid setting: 5
- Water softener setting: H3
- Dosage of the standard detergent: pre/wash 5 g + main/wash 30 g
- For the arrangement of the items, refer below figures


<Upper basket>

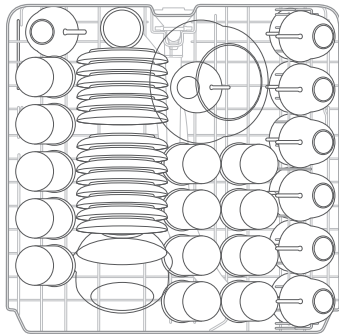


 


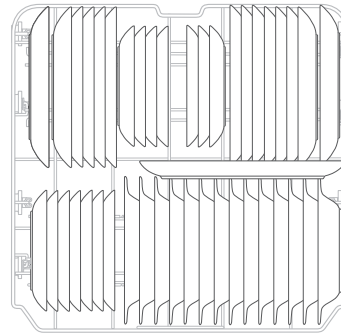

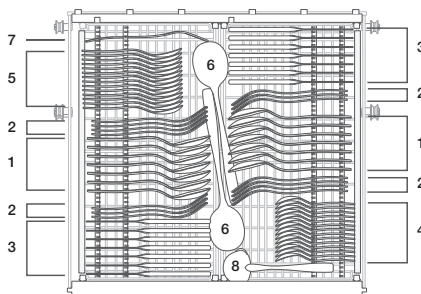

<Lower basket>




<Silverware basket>



1	Soup spoons	
2	Forks	
3	Knives	
4	Teaspoons	
5	Dessert spoons	
6	Serving spoons	
7	Serving forks	
8	Gravy ladles	


For standard test

DW60M6040**


 The information for comparability test in accordance with EN 50242, as follows:
The diagrams below show the proper way to load the baskets based on the European Standards (EN50242).

- Washing capacity: 13 place settings
- Test standard: EN50242/ IEC60436
- Position of upper basket: to lower position
- Wash cycle: Eco
- Additional options: None
- Rinse aid setting: 5
- Water softener setting: H3
- Dosage of the standard detergent: pre/wash 5 g + main/wash 27.5 g
- For the arrangement of the items, refer below figures


<Upper basket>

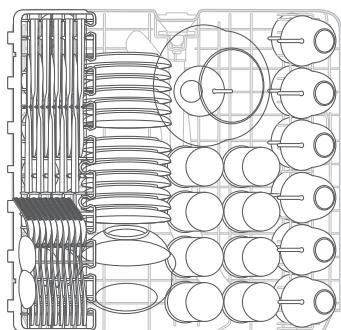



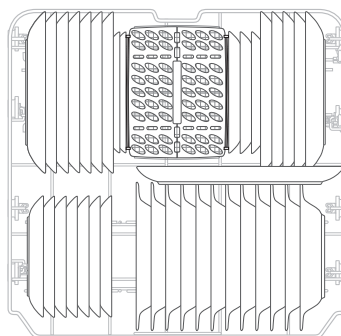



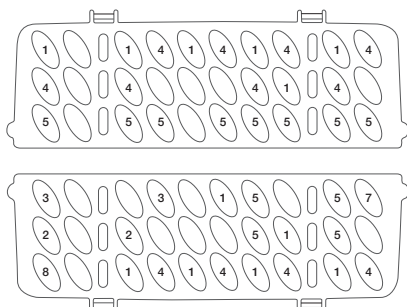

<Lower basket>



<Silverware basket>




1	Soup spoons	
2	Forks	
3	Knives	
4	Teaspoons	
5	Dessert spoons	
6	Serving spoons	
7	Serving forks	
8	Gravy ladles	

Product fiche

REGULATION (EU) NO 1059/2010

Supplier	SAMSUNG	
Model name	DW60M6040**	DW60M6050** DW60M6051**
Rated Capacity (place setting)	13	14
Energy efficiency class	A++	
Annual energy consumption, (AE c) (kWh/year) ¹⁾	262	266
Standard cycle energy consumption, (E t) (kWh)	0.92	0.93
Power consumption in off mode, P o (W)	0.45	
Power consumption in left-on mode, P l (W)	0.49	
Annual water consumption, (AW c) (L/year) ²⁾	2940	
Drying efficiency class, A (most efficient) to G (least efficient)	A	
Standard programme ³⁾	Eco	
Programme time for the standard cycle, (min)	225	
Duration of the left-on mode, (T l) (min)	30	
Airborne acoustical noise emissions (dBA re 1pW)	44	

Model	DW60M6050FS DW60M6050FW DW60M6040FS DW60M6040FW	DW60M6050US DW60M6050UW DW60M6051US DW60M6051UW DW60M6040US DW60M6040UW	DW60M6050SS	DW60M6050BB DW60M6040BB
Fully built-in				Yes
Built-under	Yes	Yes		
Free standing	Yes			
Semi built in			Yes	

-  1) based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- 2) based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- 3) 'Standard programme' is the standard cleaning cycle to which the information in the label and the fi che relates, that this programme is suitable to clean normally soiled tableware, and that it is the most effi cient programme in terms of combined energy and water consumption.
- 4) The wash time varies depending on the pressure and temperature of the supplied water.

Terminology for dishwasher

1. Circulation Motor	A motor that sucks the water remaining on the floor of the dishwasher and injects water using high pressure through the internal water passages to the top Middle and lower nozzles.
2. Drain Pump	The pump that drains the polluted water from the dishwasher generated while the dishwasher is running.
3. Heater	The heater is located on the water passages inside the dishwasher. It heats the flowing water to increase wash efficiency.
4. Flow Meter	Measure the amount of supplied water by counting the pulses of the hall IC located at the next of the inlet valve.
5. Distributor	Located at the output end of the sump inside the dishwasher. It turns the flow of the water that goes to the bottom part of the dishwasher on or off. (This model does not have this part)
6. Dispenser	The location where the detergent and rinse aids are stored so they can be used by the dishwasher. The dispenser automatically supplies detergent and rinse aids to the inside of the dishwasher when they are needed.
7. Tub Assy	An internal case made of stainless steel that makes up the basic framework of the dishwasher.
8. Sump Assy	The place inside the dishwasher where water is collected. The injected water gathers here after circulation. The sump Assy is connected to the circulation motor and drain pump.
9. Tub Front Assy	An internal case made of stainless steel that makes up internal part of the front door.
10. Base Assy	A plastic part that makes up the basic bottom framework.
11. Basket Assy	The upper and lower racks where dishes can be loaded.
12. Middle/Lower Nozzles	Washes dishes by rotating and injecting the supplied water through the water passage at high pressure.
13. Case Brake	A passage that adjusts the air pressure by connecting the pressure of the inside air which is expanded at high temperature during wash and rinse cycles and the outside air pressure.
14. Door Lock Switch	Detects whether the door of the dishwasher is open or closed if the door is open while the dishwasher is running the cycle is temporary stopped.

Note

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support



DD81-02437C-01