

Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE
LAUNDRY - DISHWASHING - COOKING - COOLING

Installation and Operating Instructions



20 Bottle Wine Cooler **WC20X** - Stainless Steel

Please read these instructions carefully before attempting to install or use this appliance.
We recommend that you keep these instructions in a safe place for future reference.

Welcome

Thank you for choosing this Montpellier appliance.

Our appliances have been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your appliance to ensure you get the most from your purchase.



2
YEAR
GUARANTEE
— PARTS & LABOUR —
ACROSS ALL OUR MODELS
Montpellier
www.montpellier-appliances.com

We recommend that you keep this manual in a safe place for future reference.

Your appliance is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your appliance, you can rest assured that you are fully protected against the cost of repairs for the first 24 months. Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found inside your appliance.

NB: Please make sure that you keep a copy of your original sales invoice as this will be needed if any service call is required.

There are three ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. www.montpellier-appliances.com
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.
- **By Phone:** Contact our warranty registration department on **0808 1961388**

Thank you for choosing this product.

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance.




Please take the time to read this User Manual before using your appliance and keep this book for future reference.

The design and specifications are subject to change without prior notice for product improvement.

Table of contents

1. Table of contents	1
2. Environment Impact Statement	2
3. Safety precautions	2
4. Packing list.....	5
5. Name of component	5
6. Technical parameters	6
7. Precautions for installation.....	6
8. Precautions for operation.....	7
9. Method of operation.....	8
10. Routine maintenance and care instructions.....	9
11. Storage of red wine.....	10
12. Ideal wine temperature	11
13. Troubleshooting	12
14. Disusing	13
15. Waste disposal warning.....	13
16. General hints	14
17. Warranty and after sales service.....	14

Symbols used in the Manual and their definitions:

 Not allowed	This symbol means that the behavior as described is not allowed, failing to comply may give rise to product damages or personal injury.
 Warning	This symbol means that the safe operation of the product and the personal safety of the operator are of concern, and that the operation must be performed in strict compliance with the requirements as specified, failing to comply may give rise to product damages or personal injuries.
 Caution	This symbol means that the operator must pay attention to the information as described, failing to comply may give rise to product damages or other losses due to the improper operation.

Environment Impact Statement

Protect the environment and avoid any pollution. This product may cause environment impacts during the operation.

Please pay attention to the following:

The carton, plastics and other recyclable wastes must be put into the classified waste bin as designated. The improper disposal of old batteries and other hazardous wastes may cause serious environmental pollution; therefore, they must be stored in the waste recycling bin.

Safety precautions

- ⚠ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ⚠ Children aged from 3 to 8 years are not allowed to load and unload refrigerating appliances.
- ⚠ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ⚠ WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ⚠ WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ⚠ WARNING: Do not damage the refrigerant circuit.
- ⚠ WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ⚠ For appliances which use flammable insulation blowing gases, the instructions shall include information regarding disposal of the appliance. Only the service agent or similarly qualified persons can disposal flammable insulation blowing gases of appliance.
- ⚠ Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- ⚠ WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- ⊘ This appliance is intended to be used in household and domestic applications only.
- ⚠ **Due to the special characteristics of the tempered glass, the tempered glass may be exploded at the probability rate of 3‰- 5‰ according to the industrial estimate, while this company will strictly control it within 3‰.**
This refrigerating appliance is not intended to be used as a built-in appliance.
Ensure that the power source complies with the requirements as indicated on the parameter nameplate
An independent socket, at least 10A and complete with earthing device, shall be used, and it is not allowed to use the transformer and extension socket for power supply.
 - In all cases, the socket must be connected to an earthing line and it is not allowed to modify the power line and plug.
 - The power line plug shall keep in solid contact with the socket; otherwise it may give rise to any fire.
 - After the wine cooler is installed in place, the plug shall be easily accessible to facilitate the removal of the cooler plug in case of any accident.

- ⊘ **Never damage the power line**
 - Never pull out the wine cooler plug by dragging the power line. To remove the plug, hold it and pull it out of the socket.
 - Avoid crushing of power line by the cooler body or trampling by anybody.
 - Take much care when handling the cooler. Bundle up the power line, but never roller it.
- ⊘ **In case of damages of power line**
 - When the power line is damaged or the plug is worn out, do not further use it. In such a case, the power line or plug must be replaced at the repair workshop designated by the manufacturer, or replaced by the competent professional.
 - Where the power line needs to be extended, it is recommended to fit a completely new cable of the same specification by a qualified electrician.
- ⚠ **In case of leakage of flammable gas**
 - Firstly, close the valve with gas leakage, and then open the doors and windows for ventilation. Never insert or remove the power socket of the wine cooler.
- ⚠ **Never store or use the gasoline or other flammable substances in the immediate area of the cooler to avoid fires.**
- ⚠ **Never place flammable and explosive substances and highly corrosive acid and alkaline etc. in the cooler.**
 - Avoid damages of the refrigerating circuit.
 - Do not use any electric device in the closet of this cooler.
 - Do not use any mechanical equipment or other methods to accelerate the defrosting process.
- ⚠ **Please take good care of children**
 - Prevent the children from playing inside the cooler.
 - Prevent the children from hanging from the door body to avoid injuries due to inclination of door body or turnover of the cooler.
 - Prevent the children from putting their hands or feet into various types of punched holes and side edges of the mechanical compartment, back plate or other metal protection parts of the cooler, to avoid injuries.
 - Prevent the children from climbing or seating on the shelf in the cooler, for this may damage the cooler and the shelf.
 - Please keep the key of the cooler(if cooler has a lock), if any, out of reach by the children, to prevent the children from locking themselves inside the cooler.
- ⚠ **Prevent water ingress**
 - Never sprinkle or flush the cooler using water, nor place the cooler in an area exposed to moisture or water sprinkling, let alone filling the cooler with water, so as to avoid impairment of the electric insulativity of the cooler. Furthermore, failing to follow such requirements may lead to electric shock and fire, or other accidents.
- ⚠ **Avoid cold injuries**
 - After the cooler is put into operation, never touch its inner surface, especially when your hand is wet; otherwise the skin may stick onto the inner surface to get injured.
- ⊘ **Never modify the wine cooler without approval**
 - It is not allowed to remove or modify the cooler without approval, nor to cause man-made damages of the refrigerating circuit.
 - The cooler must be repaired by the competent professional.
- ⊘ **Do not place the wine or other loads onto the door body when the door is open, to avoid any accident**
- ⚠ **Remove the power socket in following cases**
 - Before cleaning or servicing the cooler, or when the cooler is faulty or has a power failure, remove the power line plug of the cooler, and wait for at least 5 minutes before switching on the power supply again, to avoid damages of the compressor due to the consecutive starts.
- ⚠ **This wine cooler can be only used to store various types of wines**

- ⓘ **When the cooler is to be disposed off**
 - Keep the cabinet far away from the source of ignition to avoid any accident. Remove the door of the cooler, to avoid any accident of children when they are playing inside it.
 - Deliver the cooler to the designated place for disposal.
- ⓘ **Only the technical service personnel can carry out the maintenance of the wine cooler and non-professional participation can be dangerous for users. The replacement of the soft power cables must also comply with this regulation.**
- ⓘ **This appliance is intended to be used exclusively for the storage of wine.**
 - The appliance is not suitable for the storage of food.
 - this refrigerating appliance is not suitable for freezing foodstuffs.
- ⓘ **WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.**
- ⓘ **WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.**
- ⓘ When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.

Refrigerant

- ⓘ The refrigerant isobutane (**R600a**) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.



Warning; Risk of fire / flammable materials

If the refrigerant circuit should be damaged:


- ⓘ Avoid opening flames and sources of ignition.
- ⓘ Thoroughly ventilate the room in which the appliance is situated.

Packing list

Contents	WC20X
Main device	1 unit
Plastic packaging bag of the main device	1 piece
Operation Manual	1 copy
Warranty card	1 copy
Quality certificate	1 copy
Packaging box	1 piece
Packaging foam	1 set

Name of component

- | |
|--|
| <ol style="list-style-type: none"> 1. COOLER BODY 2. DISPLAY PANEL 3. FAN 4. SHELVES 5. HEAT DISSIPATION GRID 6. DOOR HANDLE 7. DOOR BODY 8. ADJUSTABLE FEET |
|--|

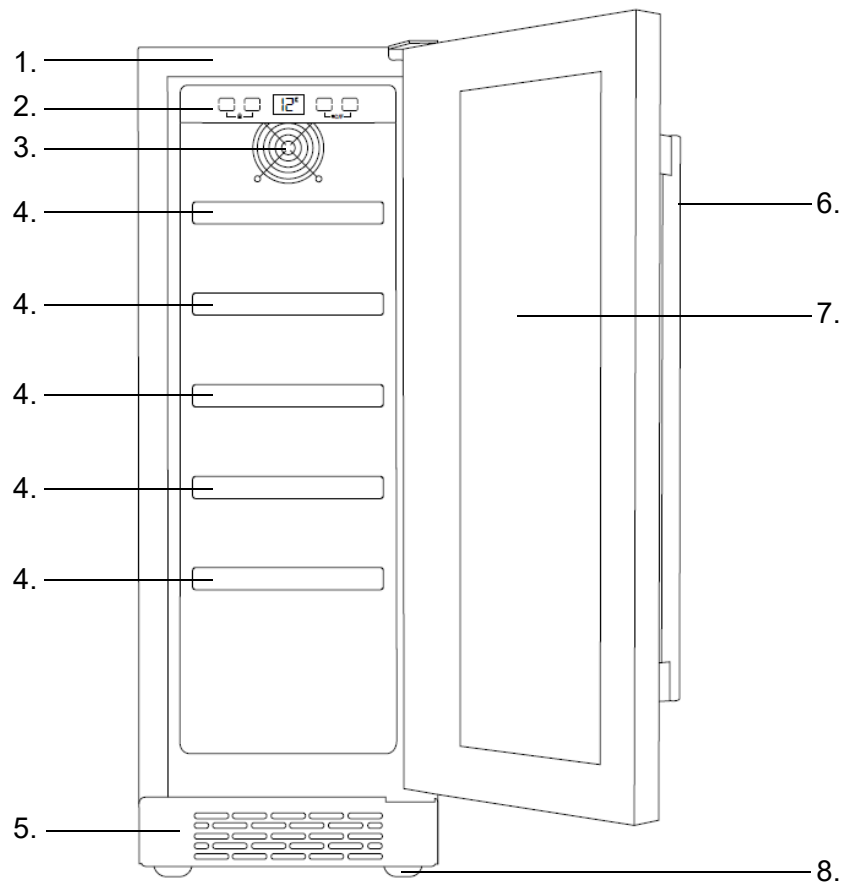

Technical parameters

<i>Model</i>	WC20X
Rated voltage	AC 220-240V ~ 50Hz
Climate type	N/ST
Rated current	1.0A
Volume	57L
Refrigerant	R600a / 20g
Insulation blowing gas	cyclopentane
Temperature range	5 -20°C
Dimensions (width* height *depth)	295*820*575

Note:

- The information about the climate type is provided on the nameplate of the cooler. “N/ST” indicates this appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C’;

Precautions for installation


- ⚠ The cooler shall not be tilted over 45° when being handled, and it can be electrified when allowed to stand for a minimum of 4 hours after handling operation.
- ⓘ The cooler must be placed on a flat and solid ground surface. If it needs to be elevated, a stable, solid and inflammable pad shall be used. Never use the packaging foam as the pad to elevate the cooler.
- ⓘ Do not place the cooler in the area exposed to moisture or water splash. The water splash or dirt on the cooler shall be timely removed using the soft cloth to prevent rusting and impairment of electric insulativity.
- ⊘ Do not place the cooler in an environment lower than 5 Celsius degree, nor use it in the rain. The cooler shall be kept far away from the heat source and protected against sunshine, to avoid influencing the normal operation of the cooler.
- ⓘ The appliance is only applied with power supply of single phase alternating current of 220~240V/50Hz. The device uses a wall socket earthed according to current recommendations.
- ⓘ If the power cable is damaged, do not proceed with his replacement but contact your after-sales service.
- ⓘ The socket must be readily accessible but out of reach of children. If unsure, contact your installer.
- ⓘ The cooler is designed for free standing installation. If you want to install the cooler in the cabinet, the cabinet shall be well ventilated; The space must be at least 25mm from the back side. The cabinet space must be not less than the instruction dimensions. And the front heat dissipation grid should not be blocked. Otherwise the normal operation of the cooler may be adversely influenced.

Model	Cabinet space \geq (width* height *depth)
WC20X	305*830*600





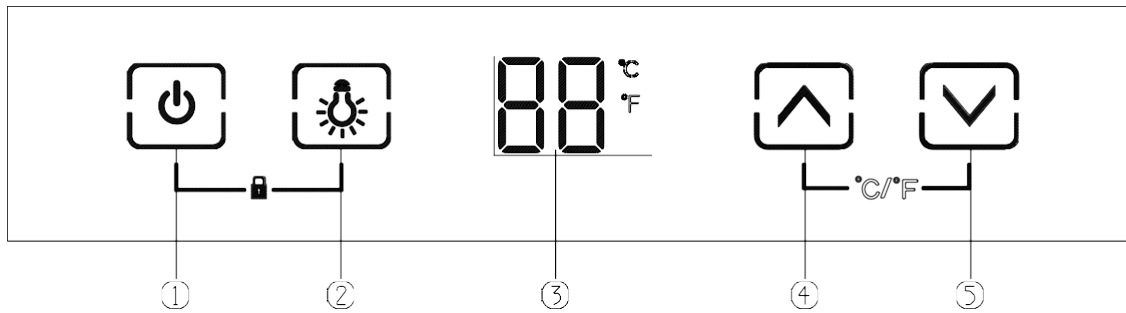

Precautions for operation

1. Clean the cooler.
2. Keep the cooler level. After the cooler is leveled and cleaned, do not electrify it immediately. Keep the cooler stationary for more than 4 hours, and then electrify it to ensure the normal operation of the cooler.
3. Close the cooler door, and insert the power line.
After the power supply is switched on, the cooler will start to work. If the cooler fails to work in a long period of time, check whether the power socket and the electric circuit work normally. If, about an hour later, an abrupt reduction of temperature is detected after the cooler door is opened, the cooler works normally. After 2~3 hours, adjust the temperature and then fill wines according the instruction. It is normal the compressor will work for a longer time for the initial plugging, and then works intermittently.
4. Generally, do not stop the cooler, to avoid influencing its normal service life. After the power line plug is removed, wait for at least 5 minutes before inserting it again, to ensure the normal operation of the cooler.
5. Do not switch off the power supply of the cooler when unnecessary, because the power interruption may cause temperature rise inside the cooler, thus to shorten the storage term of wines and degrade their drinking quality.
6. A certain space shall be maintained between wine bottles, which will facilitate the circulation of cool air. The figure illustrates the layout of drawers, baskets and shelves that result in the most efficient use of energy for the refrigerating appliance
7. It is not allowed to flush the cooler body using water, nor to wipe the body using the gasoline or other organic solvents.
8. If the power cord is damaged, it must be replaced by the professional of the manufacturer, its repair department or any similar department to avoid any danger.
9. All power sockets must be reliably earthed.
10. The system shall be set up during the initial operation of the product for better protection of this product.

Method of operation



① power key ② Lamp on/off key ③ temperature display screen ④ temperature “+” key ⑤ temperature “-” key


<p>1.</p> 	<p>Child lock key (combined key) The power supply is switched on, the cooler is in unlock mode, you can operate all the keys. The lock is not activated unless you set. Lock: To set the lock mode, press both keys simultaneously and result in a beep alarm. Unlock: To deactivate the lock, press both keys simultaneously and result in a beep alarm. Any operation should be in unlock mode.</p>
<p>2.</p> 	<p>Celsius degree/ Fahrenheit degree switchover combine key Press both keys simultaneously, you can switch over between the Celsius degree and Fahrenheit degree for display. Each time the keys is pressed, a switchover will be made. When setting the temperature, it is not allowed to switch over between the Celsius degree and Fahrenheit degree.</p>
<p>3.</p> 	<p>Power on/off key: 1. Press this key for 3S, and then all external power sources will be disconnected and all external equipment will be turned off. 2. When the cooler is in the ready mode, press this power key for 3S, the cooler will restore its normal operation and work under real-time conditions.</p>
<p>4.</p> 	<p>Lamp on/off key The lamp control key is a cycling key: Normally on → Normally off → Normally on.</p>
<p>5.</p> 	<p>Temperature “+” key 1. The digit display indicates the current temperature. In unlock mode, this key can be operated to increase the set temperature by 1°C or 1°F each time the key is pressed. The display will indicate the set temperature in a flashing way at a certain interval, and 5s later, if no further action, the setting after adjustment will be memorized, and the display will exit from the flashing mode and will recover the indication of the current temperature. 2. Rules of temperature adjustment: For example: 12°C(current set temperature) →13°C→14°C..... →20°C.</p>
<p>6.</p> 	<p>Temperature “-” key: 1. This key can be operated to decrease the set temperature by 1°C or 1°F each time the key is pressed. The display screen will indicate the set temperature in a flashing way and at a certain interval, and 5s later, if no further action, the setting after adjustment will be memorized, and the display will exit from the flashing mode and will recover the indication of the current temperature. 2. Rules of temperature adjustment: For example: 12°C (current set temperature) →11°C→10°C→.....5°C</p>

Routine maintenance and care instructions

1. To develop the best performance of this machine and prolong its service life, it shall be serviced frequently. Before maintenance, the power line plug shall be removed and it shall be confirmed that the power supply has been cut off.

2. It is not allowed to remove the power line plug from the socket by pulling the cable.

3. The cooler inside shall be thoroughly cleaned every year. To clean the cooler, the plug shall be removed and the cooler shall be emptied. Then the cooler inside shall be cleaned using the wet soft cloth or sponge dipped with clean water or soap liquid (or any other non-corrosive neutral cleanser). It is not allowed to clean the cooler using the organic solvent, alkaline detergent, boiled water, washing powder or acid and the like.

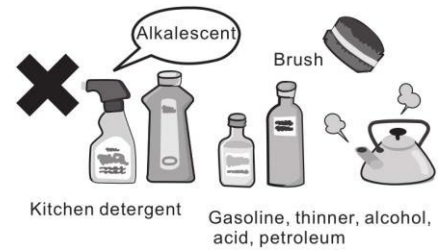

4. In the humid environment or in the rainy weather, the cooler surface may be dewed, especially on the external surface of the glass door. This is caused due to the contact with the moisture in the air. In such a case, the surface can be dried using the dry cloth.

5. To ensure the normal operation of the cooler in a long period of time, the user should inspect the cooler on a regular basis; if any abnormality is found, the manufacturer shall be notified of the same immediately.

6. During cleaning operation, it is not allowed to use the water to flush the compressor compartment of the cooler. After cleaning operation, the cooler shall be wiped using the dry cloth to prevent rusting.

Storage of red wine


Red wine storage zone:

The storage zone is mainly intended to ensure the storage of your red wine under the best conditions. The temperature of the storage zone has been set at 12°C at the delivery, and this temperature is suitable for the storage of most of wine products.


The red wine is provided with a complicated nature due to its length of treating process. To express its best feature, a specific environment is needed. Although all of wine products are manufactured at the same temperature, they need to be preserved and tasted under different temperature conditions due to their special features.

Therefore, as for the coolers of the wine manufacturer, the absolute temperature is not essential for the storage of wine. However, a steady temperature is very important within a certain period of time. The wine can be properly preserved at any temperature as long as its temperature is not changed.

Guidance on arrangement of red wine bottles

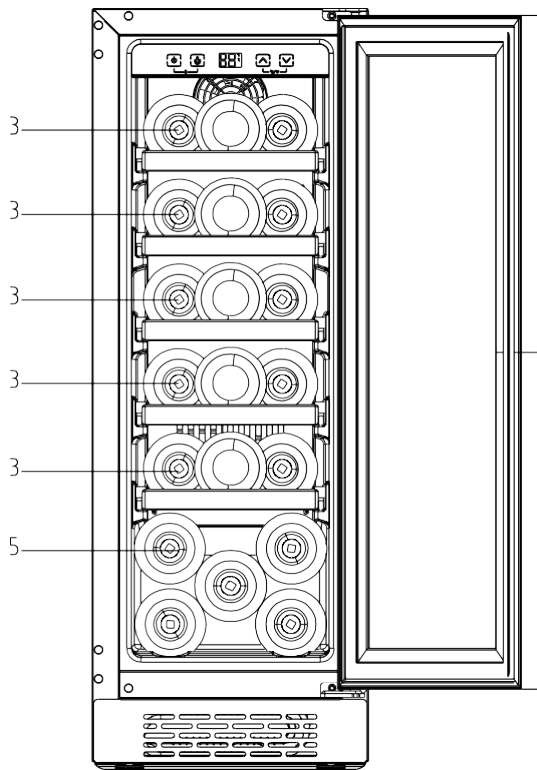

1. To enable the wine to be matured peacefully and continually within the storage term, this cooler is provided with professional shelves for layered storage, to avoid any resonance due to stack-up of wine bottles and maintain the smooth ventilation inside the cooler.
2. This cooler can store the recommendation quantity of bottles (calculated as per the diameter of 76.1mm and the height of 300.5mm) And this quantity will vary with the bottling method and the bottle sizes.
3. The shelf of each layer can be pulled out by a certain portion to facilitate the access of the bottle.
4. To avoid damages of the door seal, the door should be fully opened before drawing out each layer of shelf.
5. Make sure that the bottle is fully sealed before storage.
6. If the cooler is to be unloaded for long time, it is recommended to disconnect the power supply, carefully clean it, and open the door to keep the air circulation inside, thus to avoid frosting and mildewing which may otherwise produce odour.

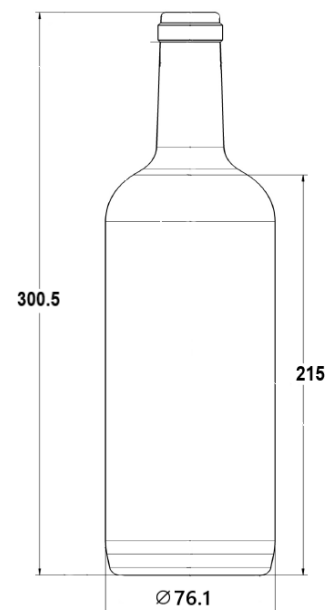

Ideal wine temperature

Below we will tell you the storage temperature for different types of wine. If you desire a more appropriate storage temperature than the inside temperature of the cooler (5 - 20°C), we recommend you to place the wine outside, and then store it into the cooler when the cooler inside temperature is more appropriate.

Amarone Classic Dry Red Wine 17°C
Barbaresco Wine 17°C
Barolo Wine 17°C
Beaujolais Wine 13°C
Bordeaux Blanc 6°C
Dry white wine 8°C
Bordeaux Red Wine 17°C
White Burgundy 11°C
Red Burgundy 18°C
Brunello Wine 17°C
Champagne 6°C
Chianti Classico 16°C
Languedoc-Roussillon 13°C
Passito di Pantelleria 6°C
Provence Rose 12°C
Sweet Sparkling Wine 6°C
Verdicchio di Matelica & Verdicchio dei Castelli di Jesi 8°C
Trentino White Wine 11°C
Franciacorta White Wine 11°C
Aromatic White 10°C
Fruity Dry White 8°C
Friulano Venetian Julia White Wine 11°C
Rodano White Wine 15°C
Loire Dry White Wine 10°C
Loire Liqueur Wine 10°C
Loire Red Wine 14°C
Passito Liqueur Wine 8 - 18°C
Rose Wine, New Wine 12°C
Light Red Wine with Malt Tannins 14°C
Red Wine with a Little of Tannins 16°C

Troubleshooting

If you find any abnormality during operation, immediately stop the operation, remove the power line plug, and check the machine according to the following instructions. If necessary, contact the after-sales service center of this company.

Status	Reason and solution	
Too high noise	The cooler is not level	Level the cooler, for the unlevelled cooler may produce noise during operation
The cooler doesn't work	The power supply is not switched on	Switch on the power supply
	The computer board is damaged	Notify the manufacturer for repair
	The compressor is provided with a protection mode	The operation interval of the compressor is 5 minutes.
The cooler door surface is dewed	The door is opened too frequently or the door is opened for too long time	Do not open the door for too long time, nor open or close the door too frequently
	The external environment is highly humid	Dry using a piece of dry cloth
	The cooler temperature is set too low	Set a proper temperature
The illumination lamp is not lit	The illumination lamp is damaged	Notify the manufacturer for replacement of the lamp
	Check whether the power supply is switched on	Check the power supply
The door is not improperly sealed and there is a leakage of cool air	The door seal may be hardened or deformed due to the low temperature inside the cooler after operation for a period of time.	Use the hot air of an hair dryer to soften the deformed surface or use the hot towel to cover the deformed surface, and close door and press it tightly after the door seal is softened.
The compressor keeps operating for long time	<p>If the temperature in the summer is too high, the compressor will work for long time. This is normal.</p> <p>If the cooler is not cool enough, please check against the following items: If the cooler door is not properly sealed or the door is opened too frequently, close the door tightly, and open the door at a lower frequency. Do not place too many drinks in the cooler, and maintain a certain space between foods. If the temperature inside the cooler reaches too low required temperature, check the temperature setup, and set the temperature at a higher level.</p>	
The refrigerating effect of the cooler is poor	<p>Adjust the refrigerating level.</p> <p>The cooler is exposed to sunshine or any heat source is located in its immediate area.</p> <p>Any hot drink is placed into the cooler</p> <p>The drinks in the cooler are crowded to impair the cool air circulation.</p> <p>The cooler door is frequently opened or is not properly closed.</p>	
There is any odor in the cooler	<p>The new cooler may give off the smell of the foaming agent or plastic. That's normal, and such smell will disappear slowly in future. Check whether there is any spoiled drink inside the cooler.</p> <p>Any odorant drink shall be tightly sealed using the plastic bag.</p> <p>The cooler shall be cleaned on a regular basis.</p>	
The cooler produces the liquid flowing sound.	The sound is generated from the flowing of the refrigerant inside the circulating pipeline of the refrigerating system. That's normal. No further treatment is required.	
The cooler produces snapping sound in operation	This is the sound generated in the startup of electric components, such as the relay and thermal protector, during start or stop of the cooler.	
	This is caused by the mutual fine movements of various kinds of materials due to the inconsistent thermal expansion and contraction arising out of abrupt changes of the cooler inside temperature when the cooler is being started or stopped.	

Disusing

If it is not used for a long time, turn off the wine cooler, pull out the plug and take off the safety device or break the fuse.

Do a good job in cleaning and open the cabinet door so that no smell will be produced.

Waste disposal warning

Packing materials are used to protect the electric appliance during transportation, and every part of the material is recycled material.

- Paper board/cardboard (made of waste paper)
- Polystyrene blocks (foam, non-fluorinated polystyrene)
- Plastic film, bag (polystyrene)
- Packing tape (polystyrene)
- **Do not let children play with packaging material, because the plastic film may cause suffocation!**
- Send the packing materials to the public environmental recycling station.

The outdated wine cooler in residential areas where garbage is not classified still has many valuable raw materials which shall be dealt with.

The outdated wine cooler shall be discarded immediately; the plug shall be pulled out, and the soft power cable shall be removed. Destroy the lock to prevent children from locking themselves when they play.

- Before sending the outdated wine cooler to the public recycling station, the cold circulation system



shall not be damaged to ensure the refrigerant and oil of the wine cooler ████████ will not leak.

- Information about recycling dates and recycling stations can be consulted with local sanitation departments or government agencies.

Correct disposal of this product	
	<p>This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.</p>

Here For You

After-sales assistance

If you continue to experience problems with your appliance, please call the Montpellier customer service helpline on: **03333 234 473**

D'YUgY \ Uj Y' U'' nci f' dfcXi Wñ XYHJ]g' Uj U]UV`Yž]bWñ X]b[` h Y' a cXY' bi a Vyfž gYf]U' bi a Vyfž cf]]]bU' gU'Yg']bj c]W' fWYUf' m' gl c k]b[` a cXY' bi a VyfžXUH' cZ di fW Ugy' UbX' nci f' fYHJ] Yfñg' XYHJ]g' VYZ:fYfY]]ghYf]b[`UZU' `H'

The service call cannot progress without this information.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions
- Any appliance that is used for anything other than domestic purposes.
Any defect caused by accident, misuse, unauthorised modification or inexperienced repair.
- Cost of Call-out where a fault cannot be found with the appliance.
Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
Use of the appliance by anyone other than the Householder.
Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
Repair costs incurred that have not been authorised by Montpellier service and/or carried out by a non-approved Montpellier engineer.
- Montpellier Appliances do not accept claims for consequential loss, rusting, corroding, delivery damage or scratches.

YOUR GUARANTEE IS VALID ONLY IN THE UK & REPUBLIC OF IRELAND

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed to it. Alternatively you can register online at www.montpellier-appliances.com/support

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on:

03333 234 473

D'YUgYfYa Ya Vyf]c \ Uj Y'U' nci f' dfcXi WñXYHJ]g' Uj U]UV`Yž]bWñ X]b[` h Y' a cXY' bi a Vyfž gYf]U' bi a VyfžXUH' cZ di fW Ugy' UbX' nci f' fYHJ] Yfñg' XYHJ]g' VYZ:fYfY]]ghYf]b[`UZU' `H'

Montpellier Domestic Appliances Ltd.
Unit 1, Tewkesbury Retail Park, Northway Lane,
Tewkesbury, Gloucestershire GL20 8JU

www.montpellier-appliances.com



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.