


BHG610SSL

60 cm 4 burner
gas hob


INSTRUCTION MANUAL

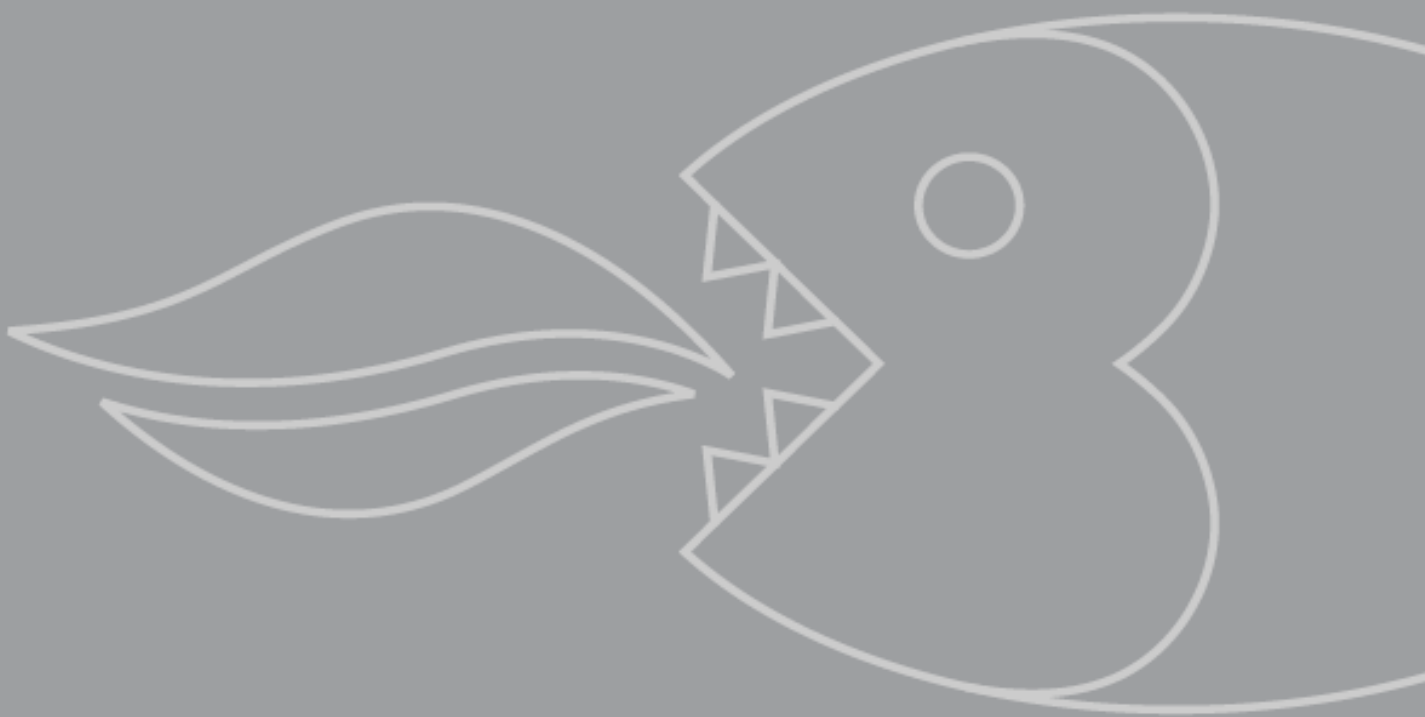

User Manual for your Baumatic

BHG610SSL

60 cm 4 Burner gas hob

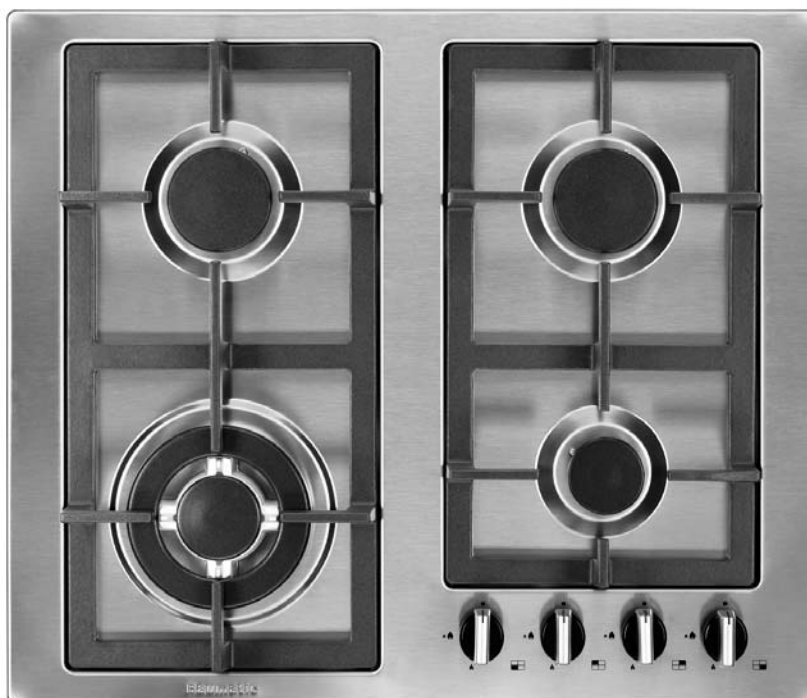

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

GS 03/02/11

Contents

Environmental note	4
Important safety information	5 – 8
Specifications	8 – 9
Product and aperture dimensions	8
Product specifications	8 - 9
Electrical details	9
Gas details	9
Gas hob surface layout	9
Using the gas hob	10 - 11
Before first use	10
Switching the hob on	10
Automatic ignition with flame failure device	10 - 11
Energy saving tips	11
Cleaning	12 - 13
Cleaning the hob top	12
After each use	12
Cleaning the hob burners	12 - 13
Maintaining the cast iron pan stands	13
Installation	13 - 22
Positioning	14 - 15
Unpacking the appliance	15
Installing the appliance	15 – 17
Gas connection	17
Ventilation requirements	17 - 18
Gas Safety (Installation and Use) Regulations	18 - 19
Minimum flow adjustment for hob gas taps	19 - 20
Gas tap maintenance	20 - 21
Electrical connection	21
Replacing the mains supply cable	21 - 22
My appliance isn't working correctly	22
Contact details	23

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



- o The packaging materials that Baumatic uses are environmentally friendly and can be recycled.
- o Please discard all packaging material with due regard for the environment.

Important safety information



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Customer Care Department.

General Information

- o This appliance is designed for domestic household use and for the cooking and frying of domestic foodstuffs.
- o **IMPORTANT:** *The adjacent furniture and all materials used in the installation **must** be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.*
- o Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- o Any damage caused by the appliance being installed in contravention of this temperature limit, **will be the liability of the owner.**
- o For use in **leisure accommodation vehicles**, please refer to the appropriate information given in the installation instructions for this appliance.
- o **IMPORTANT:** Baumatic Ltd. **DO NOT** recommend that this appliance is installed on any type of marine vessel.
- o The use of this appliance for any other purpose or in any other environment without the express agreement of Baumatic Ltd. will invalidate any warranty or liability claim.
- o Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Baumatic's Conditions Of Guarantee. The foregoing does not affect your statutory rights.
- o You should not use this appliance to store items on or as a work surface.
- o No modifications to the appliance are permitted by Baumatic Ltd.

- o You should not store or place flammable or highly flammable liquids/materials on top of or near the appliance. Items made from aluminium, plastic or plastic film should also be kept away from the appliance, as they may fuse to the surface.
- o ***Repairs may only be carried out by Baumatic service engineers or their authorised service agent.***

Warning and safety instructions

- o This appliance complies with all current European safety legislation. Baumatic do wish to emphasise that this compliance does not remove the fact that the appliance surfaces ***will become hot during use and retain heat after operation.***

Child Safety

- o Baumatic strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance ***at any time.*** During and after use, all surfaces will be hot.
- o If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.
- o Older children should only be allowed to utilise the appliance when supervised.

General Safety

- o Care should be taken to ensure that the units and work surfaces that you build the appliance into, meet with the relevant standards.
- o Any film or stickers that are present on the hob surface when it is delivered should be removed before use.
- o Care should be used when utilising the appliance, otherwise there is a risk of burns being caused.
- o You should not allow the electrical connection cables to come into contact with the hob surface when it is hot or any hot cookware.

During use

- o Make sure that you understand the controls before using the appliance.
- o If fat and oil overheats, then it can ignite extremely quickly. For this reason, when cooking with fat and oil the appliance should not be left unattended.
- o Make sure that all of the cooking zones are switched off after use.
- o Always follow the basic principles of food handling and hygiene. This will prevent the possibility of bacterial growth.

Cleaning

- o Cleaning of the hob should be carried out on a regular basis.
- o ***IMPORTANT:*** Before attempting to clean the appliance, it should be disconnected from the mains and cool.
- o Great care should be taken whilst using this appliance and when following the cleaning procedure.
- o You should not use a steam jet or any other high pressure cleaning equipment to clean the appliance.

Installation



This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions. Please see the specific section of this booklet that refers to installation.

- o ***Baumatic Ltd. declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.***
- o ***If the appliance is being used in a Leisure Accommodation Vehicle, the requirements of N 721 MUST be followed.***

Declaration of conformity


This appliance complies with the following European Directives:

-73/23/EEC dated 19/02/1973 Low Voltage Directive.

- 89/336/EEC dated 03/05/1989 EMC Directive inclusive of Amending Directive 92/31/EEC.
- 93/68/EEC dated 22/07/1993 CE Marking Directive.
- 89/109/EEC dated 25/01/1992 Materials that can touch food.
- 90/396/EEC Gas Products.
- EN60335-1, EN60335-2, EN301-1 Safety Standards.

The manufacturer declares that the hob is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.

Specifications

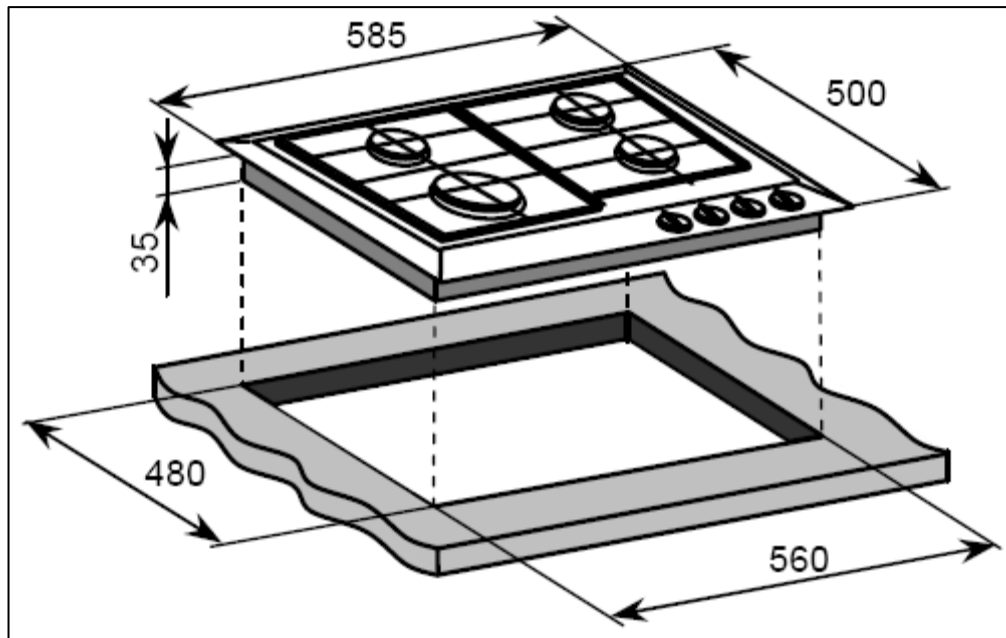

Product dimensions:

Depth: 500 mm
Width: 585 mm
Height: 35 mm

Aperture dimensions:

Depth: 480 mm
Width: 560 mm

Product specifications:

- o 1 x 3.30 kW triple crown (wok) burner
- o 2 x 1.75 kW semi-rapid burner
- o 1 x 1.00 kW auxiliary burner
- o Front control operation
- o Automatic ignition
- o Heavy duty cast iron pan stands
- o **Flame failure safety device on each burner**

Standard accessories:

- o Wok stand

Electrical details

Rated Voltage: 220 - 240 Vac 50 - 60 Hz
Supply Connection: 3 A (double pole switched fused outlet with 3mm contact gap)
Max Rated Inputs: 0.006 kW
Mains Supply Lead: 3 core x 0.75mm² (Type RR-F <HAR> marked)

Gas details

Connection: Rp ½ (ISO R7)
Type: LPG G30 (28-30 mbar)


For future reference please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice. The rating plate of your hob is located on the underneath of the appliance. Therefore it is a good idea to record this information before you install your appliance.

Model Number

Serial Number

Date of Purchase

Gas hob surface layout

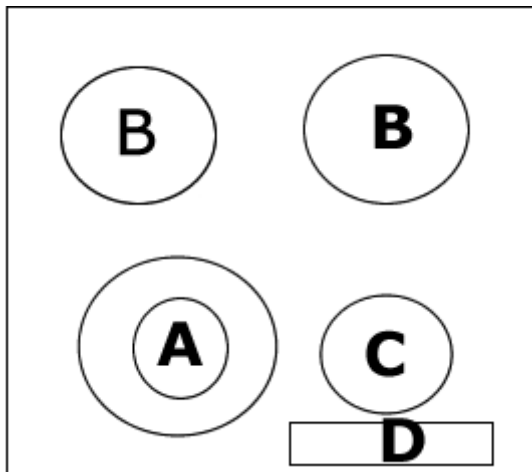

A = 3.30 kW wok burner
B = 1.75 kW semi-rapid burner
C = 1.00 kW auxiliary burner
D = Control panel

Before first use

 


IMPORTANT: You should clean the hob surface (see the “Cleaning” section on pages 12-13).

Switching the hob on

The following symbols will appear on the control panel, next to each control knob:

● = gas off



Large flame: maximum setting



Small flame: minimum setting

- o The minimum setting is at the end of the anti-clockwise rotation of the control knob.
- o All operation positions must be selected between the maximum and minimum position.
- o **Never** select a knob position between the maximum and off position.
- o The symbol on the control panel, next to the control knob will indicate which gas burner it operates.

Automatic ignition with flame failure safety device

The appliance is fitted with a flame failure safety device on each burner, which is designed to stop the flow of gas to the burner head in the event of the flame going out.

To ignite a burner:


- o Press in the control knob of the burner that you wish to light and turn it anti-clockwise to the maximum position.
- o If you keep the control knob depressed, the automatic ignition for the burner will operate.

- o You should hold down the control knob for 20 seconds **after** the flame on the burner has lit.
- o After this 20 second interval, turn the control knob to your required setting between the maximum and minimum setting symbols.
- o To switch the burner off, turn the control knob fully clockwise to the gas off position.
- o In case of power failure, the burners can be lit by carefully using a match.

Energy saving tips

BURNERS	PANS	
	Minimum diameter	Maximum diameter
Wok	220 mm	260 mm
Rapid	180 mm	220 mm
Semi-rapid	120 mm	200 mm
Auxiliary	80 mm	160 mm

- o The diameter of the bottom of the pan should correspond to that of the burner.

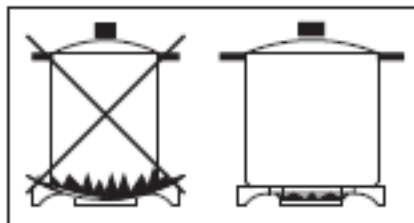

- o The burner flame must never extend beyond the diameter of the pan.
- o Use flat bottomed pans only
- o When possible, keep a lid on the pan whilst cooking.
- o Cook vegetables with as little water as possible, to reduce cooking times.

IMPORTANT: Always place pans centrally over the hob burners and position them so that the handles cannot get accidentally caught or knocked off. You should also make sure that the handle is not over one of the other hob burner flames.

Cleaning



Cleaning operations must only be carried out when the hob is cool.

The appliance should be disconnected from your mains supply before commencing any cleaning process.

Cleaning the hob top



Any residues that are left on the hob top surface from cleaning agents ***will*** damage it. You should remove any residues with warm soapy water.



Abrasive cleaners or sharp objects will damage the hob surface; you should clean it using warm soapy water.



Although it is easier to clean some deposits whilst the hob surface is still warm. Make sure that the hob surface, pan supports and hob burners have all cooled sufficiently before you attempt to touch them.

After each use

- o Remove the pan stands and wipe the appliance over with a soft, damp cloth that has been put into warm soapy water. The cloth should be wrung out after being taken out of the soapy water.
- o Dry the appliance by rubbing the surface with a soft, clean cloth.
- o We would recommend that an appropriate stainless steel cleaner and polish is regularly used on the stainless steel surfaces of this appliance.

Cleaning the hob burners

The hob burners should be cleaned once a week or more frequently if they get soiled.

- o ***IMPORTANT:*** Make sure that the hob surface, pan stands and hob burners have cooled before you attempt to touch them.
- o Remove the hob burners by pulling them upwards and away from the hob top.
- o Soak them for about ten minutes in hot water and a little detergent.

- o After cleaning and washing them, wipe and dry them carefully.
- o Before placing the burners back on the hob top, ***make sure that the gas jet is not blocked.***
- o ***IMPORTANT:*** Make sure that you reassemble the burners in the original way.

Maintaining the cast iron pan stands

- o ***IMPORTANT:*** Make sure that the hob surface and pan stands have cooled before you attempt to touch them.
- o Wipe the pan stands over with a soft, damp cloth that has been put into warm soapy water. The cloth should be wrung out after being taken out of the soapy water.
- o Using a paper towel, thoroughly dry the pan stands.
- o To maintain the appearance of the cast iron pan stands, we would recommend that you rub a small amount of olive oil into the pan stands, after you have finished cleaning them.

Installation




The installation must be carried out by a suitably qualified person, in accordance with the current version of the following.

- o ***UK Regulations and Safety Standards or their European Norm Replacements.***
- o ***Building Regulations*** (issued by the Department of Environment)
- o ***Building Standards*** (Issued by the Scottish Development Department)
- o ***IEE Wiring Regulations***
- o ***Electricity at Work Regulations***
- o ***Gas Safety (Installation and Use) Regulations.***

Positioning



The adjacent furniture must be able to withstand a minimum temperature rise of 85°C above the ambient temperature of the room it is located in, during periods of use.

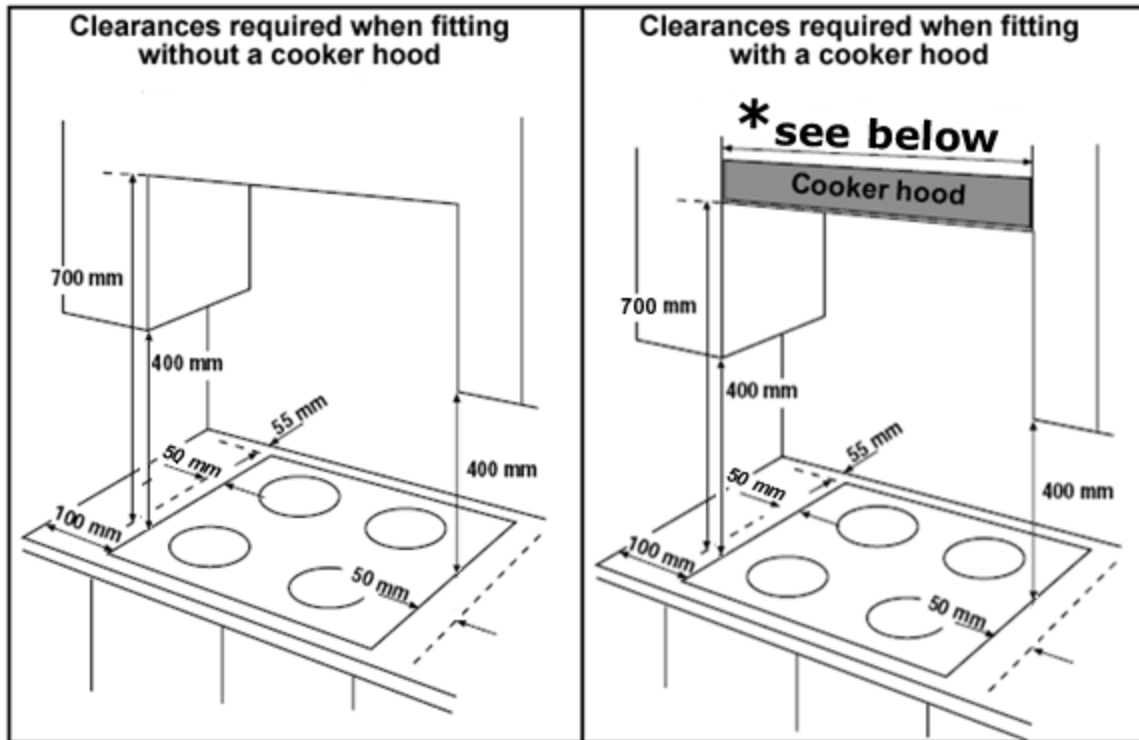

*** 600 mm**

- o This appliance can be located in a kitchen, a kitchen diner or a bed sitting room. **IMPORTANT:** *The appliance must not be installed in a bathroom or shower room.*
- o **LPG models** must not be installed in a room or internal space below ground level (e.g. in a basement).

This appliance is classified as Class 3 and therefore is to be built into a kitchen unit (depending on size) or 600mm worktop, providing the following minimum distances are allowed:

- o The edges of the hob must be a minimum distance of 50 mm from a side or rear wall.
- o 700 mm between the highest point of the hob surface (including the burners) and the underside of any horizontal surface directly above it.
- o 400 mm between the hob surface, providing that the underside of the horizontal surface is in line with the outer edge of the hob. If the underside of the horizontal surface is lower than 400 mm,

then it must be **at least** 50 mm away from the outer edges of the hob.


- o 50 mm clearance around the front, back and sides of the appliance, measured from the cut out, and between the hob surface and any combustible materials.
- o If the hob is positioned so that the right or left hand side of the appliance will be near to the edge of a kitchen unit. There must be a gap of at least 150 mm between the side of the hob and the vertical surface of any kitchen unit that is made of a combustible material. If the vertical surface is made of a non-combustible material, then 55 mm clearance is sufficient. **HOWEVER** sufficient space must be allowed for saucepan handles to be turned and for saucepans to be used safely.
- o If the appliance is to be installed in a Leisure Accommodation Vehicle, the requirements of EN 721 must be applied.

Unpacking the appliance


When unpacking the appliance please check that the following items are contained within the packaging:

1 x Baumatic hob
Pan stands
Burner assemblies
Instruction manual
Baumatic warranty card
Fixing screws
Clamps
Sealing strip
Wok stand


Installing the appliance

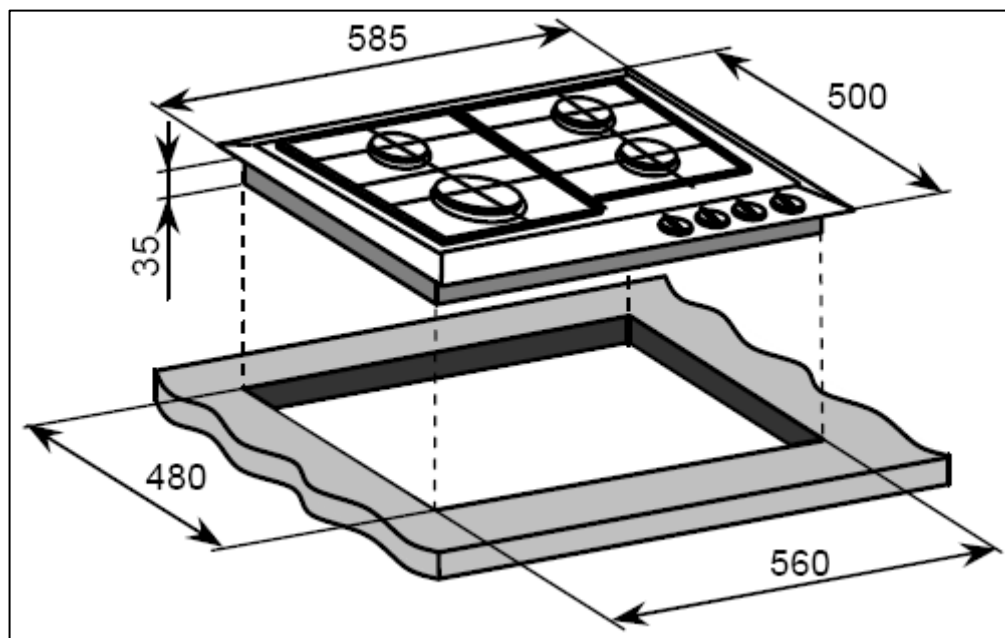


- o Cut a hole in the worktop that corresponds with the drawing on the previous page.

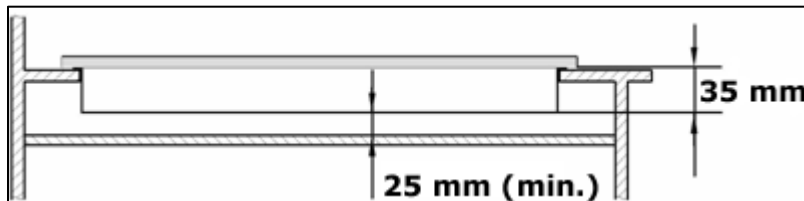

- o **IMPORTANT:** You must have a gap of at least 25 mm between the underneath of the appliance and any surface that is below it.

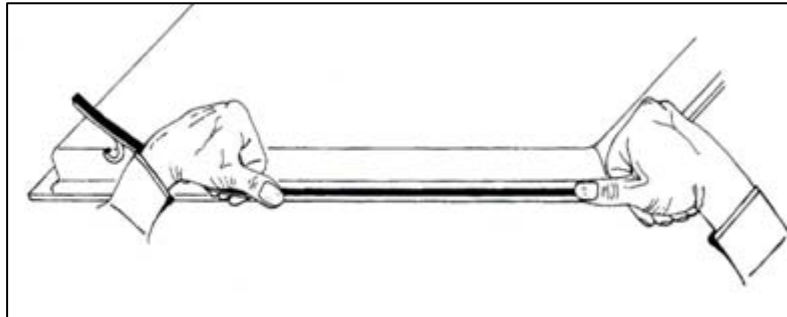

- o Carefully turn the hob upside down and place it on a cushioned mat.
- o Apply the sealing strip **(A)** provided around the edge of the appliance.
- o The protective covering must be removed from both sides.
- o Do not leave a gap in the sealing agent or overlap the thickness.
- o **IMPORTANT:** Do not use a silicon sealant to seal the appliance against the aperture. This will make it difficult to remove the hob from the aperture in future if it needs to be serviced.

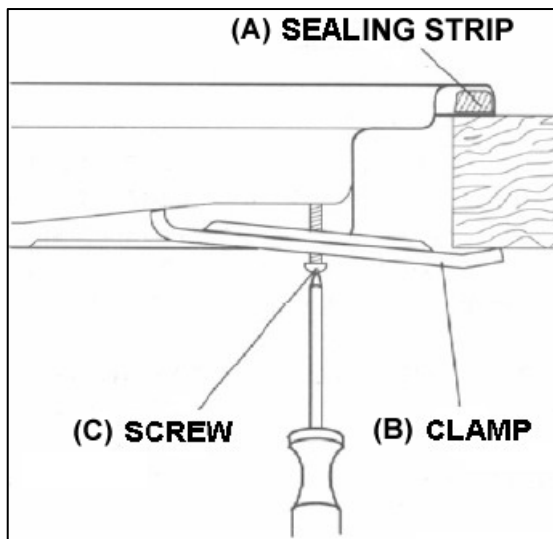

- (A) Sealing strip
- (B) Clamp
- (C) Screw

- o Place the clamp **(B)** over the holes that match the size of the screws. There are one set of screw holes in each corner of the hob. Slightly tighten a screw **(C)** through the clamp **(B)** so that the clamp is attached to the hob, but so that you can still adjust the position of it.
- o Carefully turn the hob back over and then gently lower it into the aperture hole that you have cut out.
- o On the underneath of the hob, adjust the clamps into a position that is suitable for your worktop. Then fully tighten the screws **(C)** to secure the hob into position.

Gas connection



This appliance must be installed by a competent person in accordance with the current versions of the following UK (United Kingdom) or ROI (Republic of Ireland) Regulations and Safety Standards or their European Norm Replacements.

Important information

- o This oven is supplied to run on **LPG only** and cannot be used on any other type of gas without modification.
- o The hob must be installed by a qualified person, in accordance with the current edition of the Gas Safety (Installation and Use) Regulations and the relevant building/I.E.E. Regulations.
- o Failure to install the appliance correctly could invalidate Baumatic's guarantee and lead to prosecution under the regulations quoted above.
- o In the UK, **GASSAFE** registered installers are authorised to undertake the installation and service work, in compliance with the above regulations.

Ventilation requirements


- o The room containing the hob should have an air supply in accordance with the current edition of BS 5440: Part 2:
- o The room must have opening windows or equivalent; some rooms may also require a permanent vent.
- o If the room has a volume between 5 and 10m³, it will require an air vent of 50cm² (effective area). Unless it has a door which opens directly to the outside.

- o If the room has a volume of less than 5m³, it will require an air vent of 100cm² (effective area).
- o If it is installed in a room with a volume that exceeds 11m³, then no air vent is required.
- o If there are any other fuel burning appliances in the same room the current edition of BS 5440: Part 2: should be consulted to determine air vent requirements.
- o Ensure that the room containing the hob is well ventilated, keep natural ventilation holes or install a mechanical ventilation device (mechanical cooker hood).
- o Prolonged intensive use of the appliance may call for additional ventilation, either by the opening of a window, or by increasing the level of the mechanical ventilation device (where present).
- o This hob is not fitted with a device for discharging the products of combustion. Ensure that the ventilation rules and regulations are followed.
- o The walls behind and near the hob should be resistant to heat, steam and condensation.
- o Remember that the quantity of air necessary for combustion must never be less than 2m³/h for each kW of power (see total power in kW on the appliance rating plate).

Gas Safety (Installation and Use) Regulations

IMPORTANT: The appliance MUST be connected to the gas supply by use of a ½ BSP Elbow, seal, copper pipe and an isolation tap fitted in an easily accessible position.

- o It is the law that all gas appliances are installed by competent persons in accordance with the current edition of the ***Gas Safety Installation and Use Regulations***.
- o It is in your interest and that of safety to ensure compliance with the law.
- o In the UK, GASSAFE registered installers work to safe standards of practice. The cooker must also be installed in accordance with the current edition of BS 6172. Failure to install the hob correctly could invalidate the warranty, liability claims and lead to prosecution.

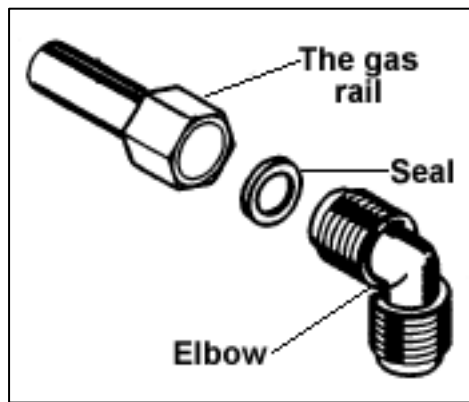


- o Put the gas seal into the elbow.
- o Fully tighten the elbow and seal onto the gas rail.
- o The elbow **MUST** be pointing in a downwards direction.
- o Gas pressure may be checked on a semi-rapid hob burner. Remove the appropriate injector and attach a test nipple. Light the other burners and observe that the gas pressure complies with the gas standards in force.
- o **IMPORTANT: On completion carry out a gas soundness test.**

Minimum flow adjustment for hob gas taps.



All work must be carried out by a GASSAFE registered engineer.

IMPORTANT: Always isolate the hob from the electricity supply before changing the injectors and/or adjusting the minimum flow of the burners.

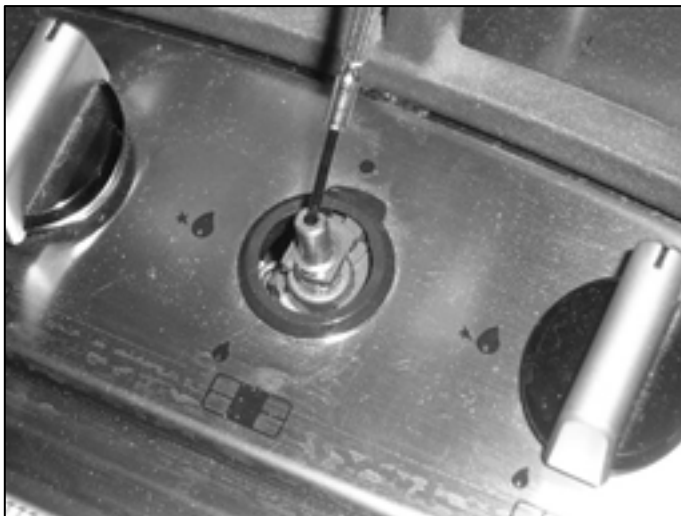

- o Switch the burner on and set the knob at the minimum position.
- o Remove the knob from the tap and place a small bladed screwdriver in the centre of the tap shaft.

- o Unscrew the adjusting screw, in order to increase the gas flow or tighten the adjusting screw to decrease the gas flow.
 - o The correct adjustment is obtained when the flame has a length of about 3 – 4 mm.
 - o Refit the control knob.
 - o Make sure that the flame does not go out by quickly turning from maximum flow to minimum flow. If it does then remove the control knob and make further adjustments to the gas flow, testing it again once the adjustment has been made.
 - o Repeat this process for each one of the gas taps.

Gas tap maintenance



These maintenance operations MUST ONLY be carried out by a GASSAFE registered engineer.

IMPORTANT: Before carrying out any maintenance operations, disconnect the appliance from the gas and electricity supplies.

If a gas tap becomes stiff to operate, then you should proceed as follows:

- o Remove the control knobs, pan supports, burners, hob fixing screws and clamps.
- o Remove the hob from the worktop and remove any underside protective covers.
- o Disconnect the fixings holding the tap to the fascia panel and separate the assembly. Then clean the cone and seating, with a cloth dampened with solvent.
- o Lightly smear the cone with high temperature grease, reassemble into position and rotate a few times.
- o Remove the cone again and remove any excess grease, making sure that the gas ducts are not obstructed with grease.
- o Carefully reassemble the components and perform a gas soundness test.

If it becomes necessary to replace a gas tap, then you should proceed as follows:

- o Remove the control knobs, pan supports, burners, hob fixing screws and clamps.
- o Remove the hob from the worktop and remove any underside protective covers.
- o Disconnect the fixings holding the tap to the fascia panel and separate the assembly.
- o Disconnect the gas pipe from the gas tap, and then disassemble them from the gas rail by removing the fixing screws.
- o When fitting a new tap, ensure that a new gasket is used.
- o Reconnect the gas tap, perform a gas soundness test and then reassemble the hob.

Electrical connection



This appliance must be installed by a qualified person in accordance with the latest edition of the I.E.E. Regulations and in compliance with Baumatic's instructions.

Before connecting the appliance, make sure that the supply voltage marked on the rating plate corresponds with your mains supply voltage.

- o Cable type: H05 RRF 3 core x 0.75 mm³ (Type RR-F <HAR> marked).
- o The mains supply cable is supplied with this product.

Replacing the mains supply cable

If the mains supply cable is damaged, then it must be replaced by an appropriate replacement which can be obtained from the Baumatic Spares Department.

The mains supply cable should be replaced in accordance with the following instructions:

- o ***Switch the appliance off at your mains supply.***
- o Open the box of the supply board.
- o Unscrew the clamp fixing the cable.

- o Replace the cable with one of the same length and in accordance with the specification given above.
- o The “green-yellow” earth wire must be connected to the terminal marked $\perp$. It must be about 10 mm longer than the live and neutral wires.
- o The “blue” neutral wire must be connected to the terminal marked with letter (N) - the live wire must be connected to the terminal marked with letter (L).

My appliance isn't working correctly



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Customer Care Department on telephone number (0118) 933 6911.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

IMPORTANT: Baumatic Ltd. operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.



United Kingdom

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Sales Fax

(0118) 931 0035

Customer Care Telephone

(0118) 933 6911

Customer Care Fax

(0118) 986 9124

Spares Telephone

(01235) 437244

Advice Line Telephone

(0118) 933 6933

E-mail:

sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:

www.baumatic.co.uk

Republic of Ireland

Service Telephone

1-890 812 724

Spares Telephone

091 756 771

Czech Republic

Baumatic CR spol s.r.o.
Průmyslová zóna Sever 696
460 11 Liberec 11
Czech Republic

+420 483 577 200

www.baumatic.cz

Slovakia

Baumatic Slovakia, s.r.o.
Galvániho 7/D
Slovakia

+421 255 640 618

Germany

Baumatic Gmbh
Lilienthalstrasse 1
320 52 Herford
Deutschland

+49 5221 694 99-0

www.baumatic.de

Italy

Baumatic Italia S.R.L.
Via Galvani N.3
35011 Campodarsego (PD)

+3904 9920 2297

www.baumatic.it

Holland

Baumatic Benelux B.V.
Grindzuigerstraat 22
1333 MS ALMERE
Nederland

+3136 549 1555

www.baumatic.nl

